



IsoBeamTM

Isolator Shield for NanoBeam®

Models: ISO-BEAM-16

ISO-BEAM-19

QUICK START GUIDE

Available from A1 Security Cameras

a1securitycameras.com email: sales@a1securitycameras.com

IsoBeam™ Compatibility

IsoBeam	Compatible NanoBeam Models
ISO-BEAM-16	NBE-M5-16, NBE-5AC-16
ISO-BEAM-19	NBE-M2-13, NBE-M5-19, NBE-5AC-19

Package Contents



IsoBeam Shield



IsoBeam Ring



Quick Start Guide

Installation

1. Align the bubble level and port of the NanoBeam with the openings of the *IsoBeam Shield*, and then insert the NanoBeam into the *IsoBeam Shield*.



Available from A1 Security Cameras

a1securitycameras.com email: sales@a1securitycameras.com

2. Align the tabs of the *IsoBeam Ring* with the slots of the *IsoBeam Shield*. Insert the *IsoBeam Ring* into the *IsoBeam Shield* until the tabs lock into the slots.



3. Insert the ball joint mount into the NanoBeam.



Available from A1 Security Cameras

a1securitycameras.com email: sales@a1securitycameras.com

4. Insert the lock ring into the NanoBeam.



5. Turn the lock ring to secure the ball joint mount to the NanoBeam.



Online Resources

Support support.ubnt.com

Community community.ubnt.com

Downloads downloads.ubnt.com

©2016 Ubiquiti Networks, Inc. All rights reserved. Ubiquiti, Ubiquiti Networks, the Ubiquiti U logo, the Ubiquiti beam logo, IsoBeam, and NanoBeam are trademarks or registered trademarks of Ubiquiti Networks, Inc. in the United States and in other countries. All other trademarks are the property of their respective owners.

JL030716



640-00233-02

Available from A1 Security Cameras

a1securitycameras.com email: sales@a1securitycameras.com