





AXIS T94V01L Recessed Mount


Installation Guide

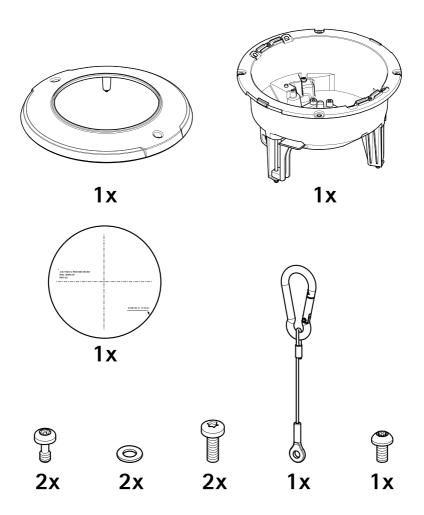





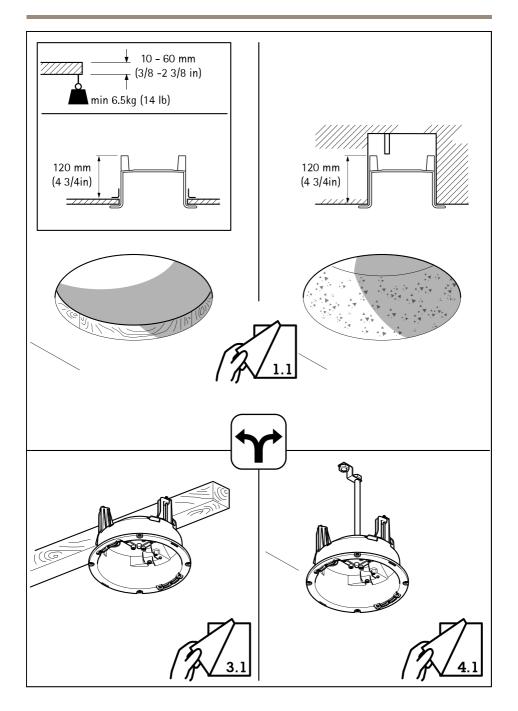





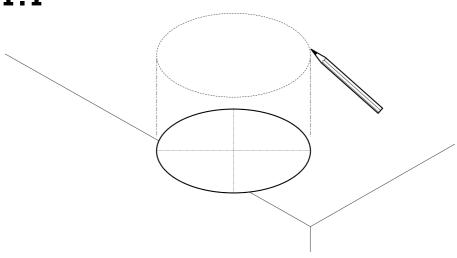


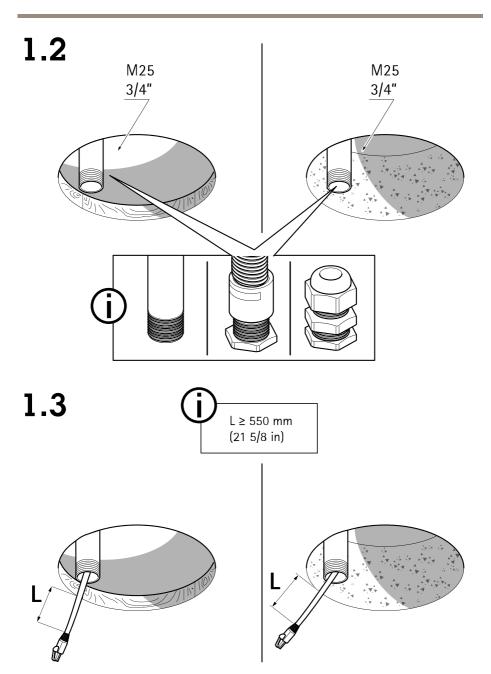


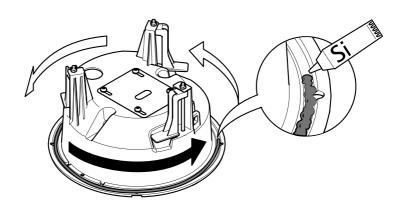


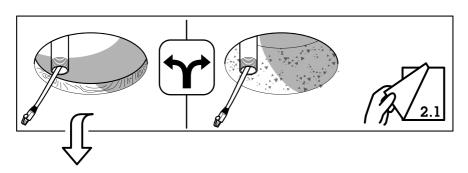


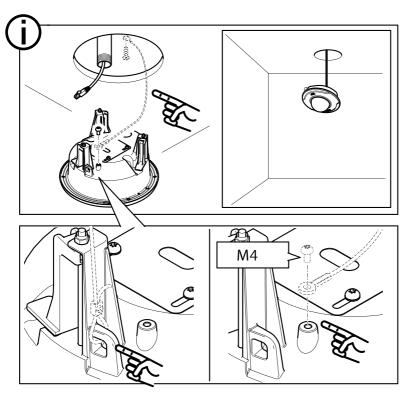


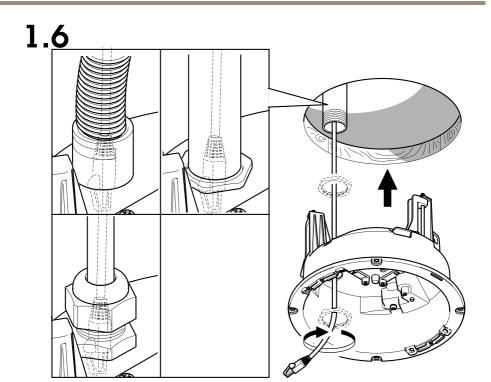


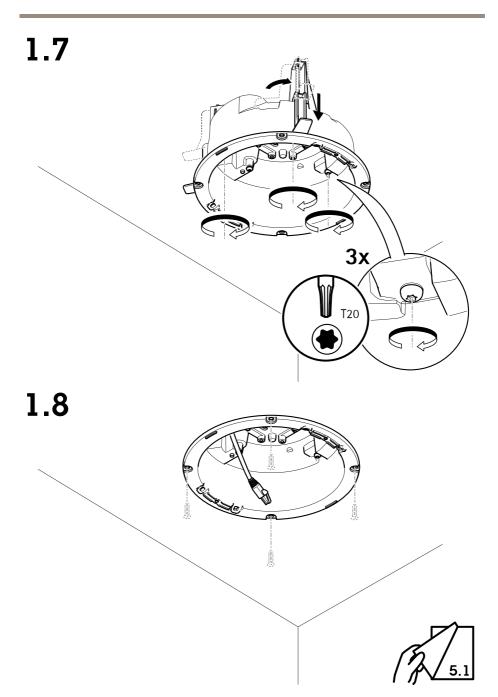


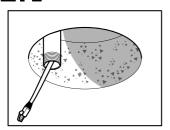


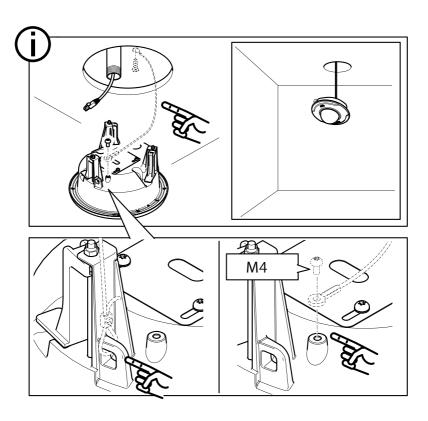

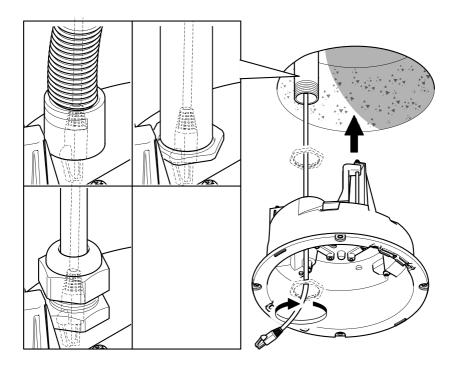


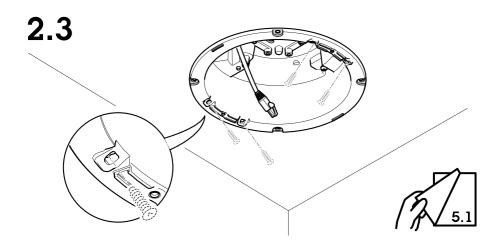


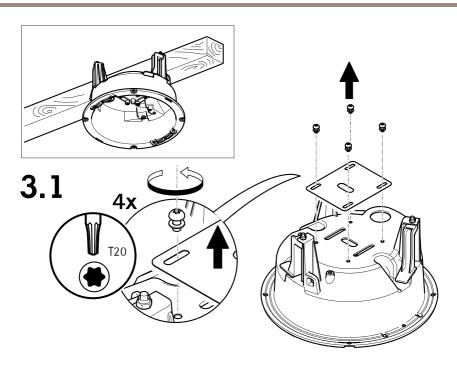


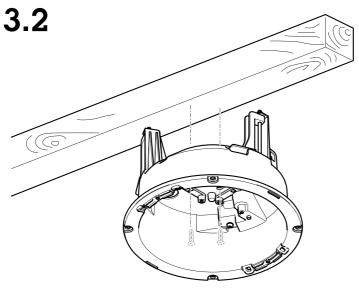





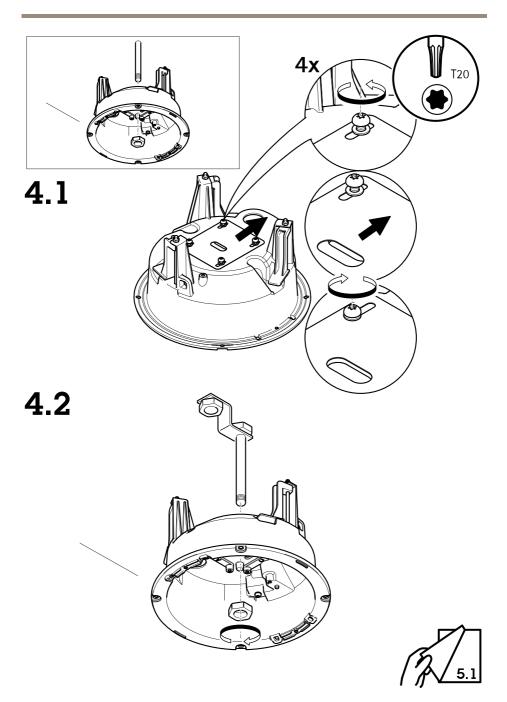


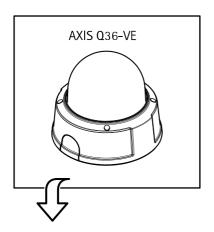

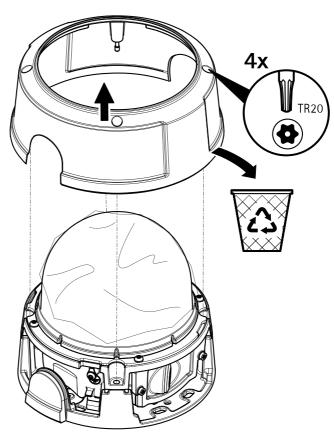


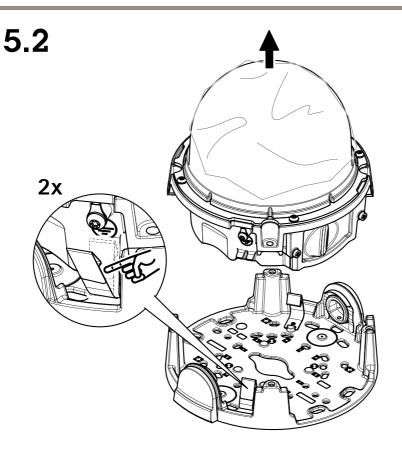


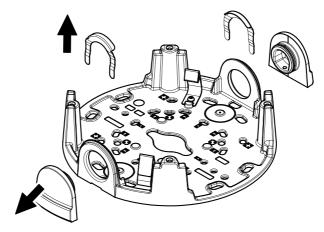


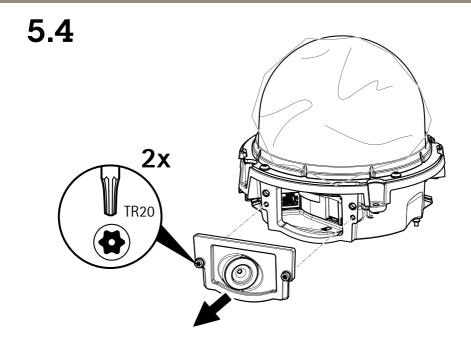





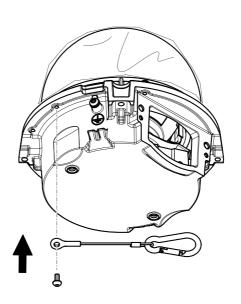


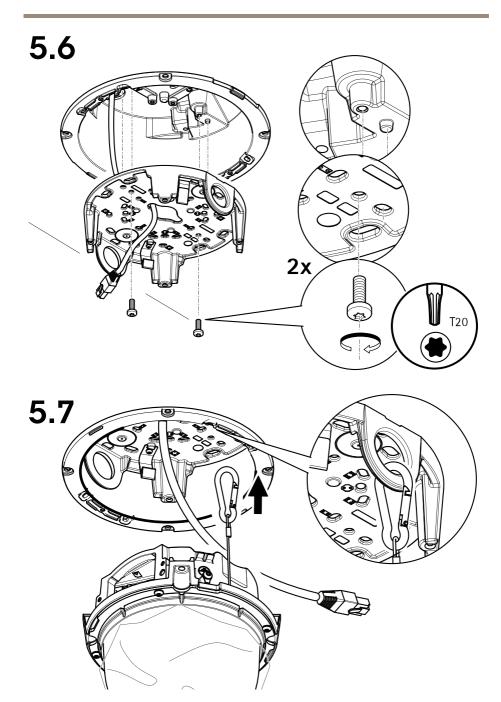


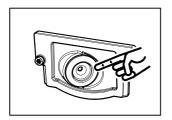


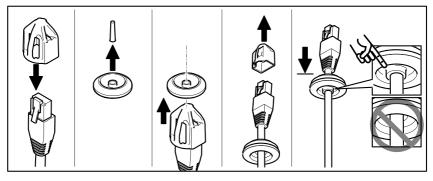

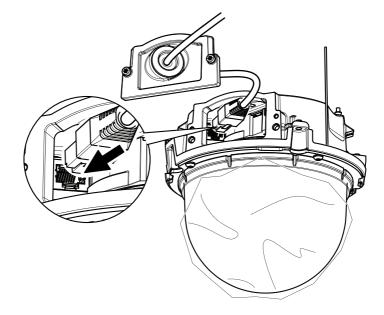

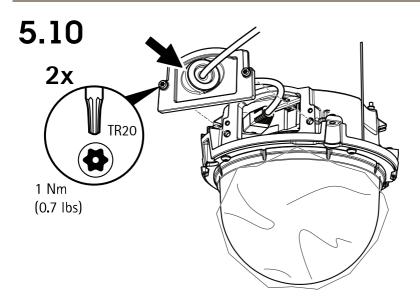

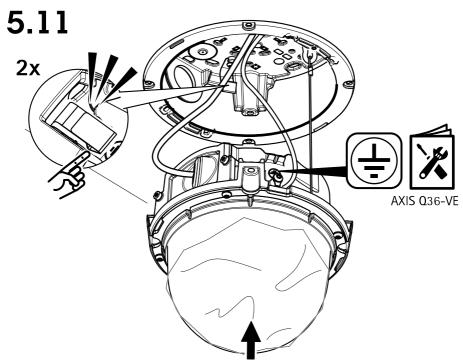

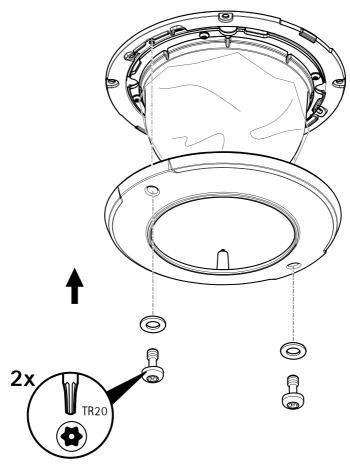





Installation Guide
AXIS T94V01L Recessed Mount
© Axis Communications AB, 2016

Ver. M1.4