


FD8166 Fixed Dome Network Camera

Quick Installation Guide

English 【祭中 【符中 【日本語 【Français 【Español 】 Deutsch 【Português 】 Italiano 】 Türkçe 【Polski 【Pycoxий 【Česky 【Svenska 】 Nederlands Dansk 【Indonesia 】 الْمُونِية

2MP • Stylish Design • Easy Installation

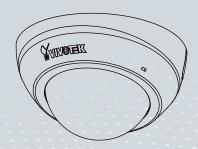



Warning Before InstallaSPCURITYCAMERAS

smoke or unusual odors are detected.



Contact your distributor in the event of occurrence.





Contact your distributor in the event of occurrence.

Do not place the Network Camera on unsteady surfaces.



Do not touch the Network Camera during a lightning storm.



Do not insert sharp or tiny objects into the Network Camera.



Do not place the Network Camera in high humidity environments.





FD8166



Quick Installation Guide / Warranty Card





Focus Adjustment Tool



Screws




Software CD



NOTE:

All cables are user-supplied. Use a CAT5 standard UTP or better quality cable. In order to pass the Ethernet cable through the routing path, the maximum cable diameter allowed is 5.2mm.

2 Physical Description he First Name in Security

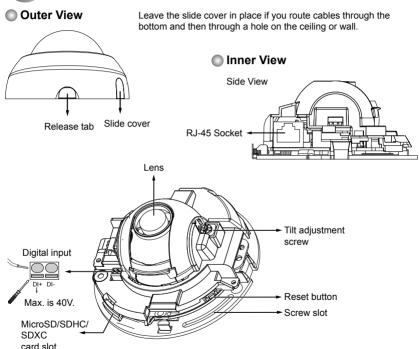


Available from A1 Security Cameras www.a1securitycameras.com email: sales@a1securitycameras.com




Removing the Dome Cover

- 1 Use one hand to hold the camera bottom and another hand to hold the dome cover Press the release button
- 2 Remove the dome cover
- 3. Remove the slide cover if you want to route cables from the side of camera instead of a hole on the ceiling or wall.

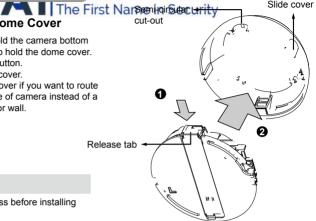

IMPORTANT:

 1. Record the MAC address before installing the camera



2 You can check the model name suffix for the type of lens mounted on your camera. The applicable lens can be:

F2: 2.8mm: F3: 3.6mm: F6: 6mm. The shorter the focal length, the wider the view.

NOTE:

It is recommended to use an Ethernet cable that comes without the strain relief boot. You can remove the boot if your cable comes with one.




Strain relief boot

Mounting the Network Camera - Ceiling or Wall Mount

- 1. Use the curved slots on the ceiling. Drill two holes into the ceiling; and harmer in the plastic anchors.

 2. Drill another hole if you want to route cables through the ceiling or wall.
- 3. Connect and route an Ethernet cable through the ceiling or wall.
- 4. Attach the Network Camera to the ceiling using two included screws.

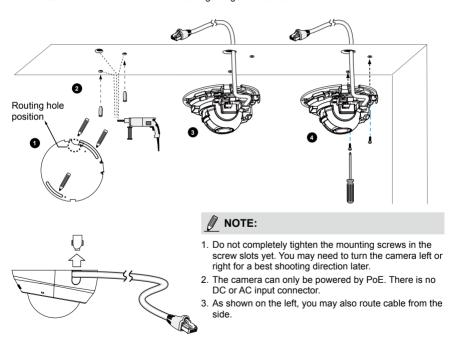




When using a PoE-enabled switch

This Network Camera is PoE-compliant, allowing transmission of power and data via a single Ethernet cable. Follow the below illustration to connect the camera to a PoE-enabled switch via Ethernet cable.



When using a non-PoE switch

Use a PoE power injector (optional) to connect between the Network Camera and a non-PoE switch.

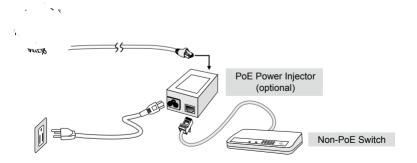

5 Assigning & A1 SECURITY CAMERAS The First Name in Security

- 1. Install "Installation Wizard 2" from the Software Utility directory on the software CD.
- The program will conduct an analysis of your network environment. After your network is analyzed, please click on the "Next" button to continue the program.





- 3. The program will search for VIVOTEK Video Receivers, Video Servers, and Network Cameras on the same LAN.
- 4. After a brief search, the main installer window will pop up. Double-click on the MAC address that matches the one printed on the camera label or the S/N number on the package box label to open a browser management session with the Network Camera.





Available from A1 Secutrity €ameras



- 1. A browser session with the Network Camera should prompt as shown below.
- You should be able to see live video from your camera. You may also install the 32-channel recording software from the software CD in a deployment consisting of multiple cameras. For its installation details, please refer to its related documents.




For further setup, please refer to the user's manual on the software CD.

7 Adjusting the Lens The First Name in Security

/\ WARNING


Do not use your hands to tune the lens module's tilt angle. Doing so will damage the delicate tilt mechanism.

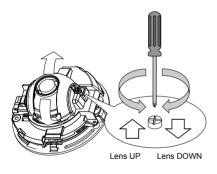


Tighten the camera's mounting screws after you change the horizontal shooting direction.



- There is a tilt adjustment screw near the lens module. Use a #0, #1, or #2 Phillips screwdriver to turn the screw and the lens will move upwards or downwards.
- You may also tune the camera's horizontal orientation by turning it along its curved screw slots.

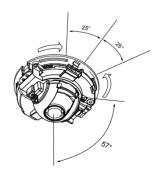

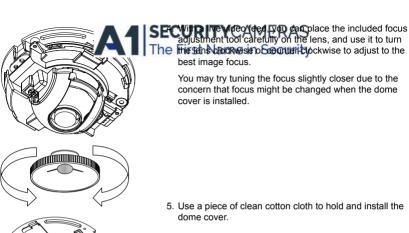

Install dome cover by aligning the semi-circular cut-out with the release tab. Press on both ends of the dome

heard when it is properly installed.

cover for it to snap into place. A "click" sound should be

Semi-circular cut-out

Release tab

Available from A158 durit OCameras www.a1securitycameras.com email: sales@a1securitycameras.com



P/N:625020901G Rev. 1.1

All specifications are subject to change without notice
Copyright © 2013 VIVOTEK INC. All rights reserved.



VIVOTEK INC.

6F, No.192, Lien-Cheng Rd., Chung-Ho, New Taipei City, 235, Taiwan, R.O.C. | T: +886-2-82455282 | F: +886-2-82455532 | E: sales@vivotek.com

VIVOTEK USA, INC.

2050 Ringwood Avenue, San Jose, CA 95131 |T: 408-773-8686 | F: 408-773-8298 | E: salesusa@vivotek.com

Available from A1 Security Cameras