




IP8371E Bullet Network Camera

Quick Installation Guide

English I 繁中 I 翁中 I 日本語 I Français I Español I Deutsch I Portuguès I Italiano I Тürkçe I Polski I Русский I Česky I Svenska I Nederlands Dansk I Indonesia I أمريية

3MP • 30M IR • Smart Focus System • IP67 • Cable Management

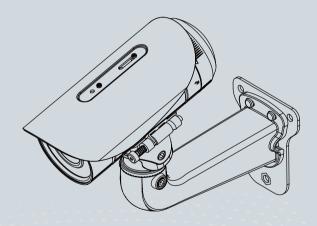



Warning Before Installation

- Power off the Network Camera as soon as smoke or unusual odors are detected.
- Do not place the Network Camera on unsteady surfaces.
- Do not insert sharp or tiny objects into the Network Camera.
- Refer to your user's manual for the operating temperature.
- Do not touch the Network Camera during a lightning storm.
- Do not drop the Network Camera.



Package Contents

IP8371E with an RJ45 Cable



Wall Mount Bracket



Waterproof Connector (for backup use)



Sun Shield / Wrench / RJ45 Female / Female Coupler / Double-sided Tape / Screws





Waterproof Connector for RJ45
Ethernet Enclosure



Alignment Sticker / Desiccant Bag

















Warranty Card



2 Physical Description

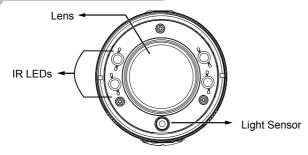

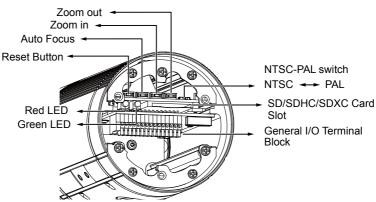


EN-2



3 Hardware Installation

- Attach the alignment sticker to the wall. Drill four holes into the wall. Then hammer the supplied plastic anchors into the holes and secure the plate with supplied screws.
- 2. Fix the intersection bracket to the side of the Network Camera with two screws.
- Feed the RJ45 cable through the front opening of the wall mount bracket. (If you want to use external devices such as sensors and alarms, please refer to the assembling steps on the next page.)
- 4. Push the spring mortise and hook the bracket onto the groove of the wall mount bracket.
- 5. Secure the two screws on the other side of the wall mount bracket.
- 6. Hang the wall mount bracket to the mounting plate.
- 7. Fix the wall mount bracket with the supplied screw.
- 8. Adjust the angle of the wall mount bracket to aim at the shooting area.

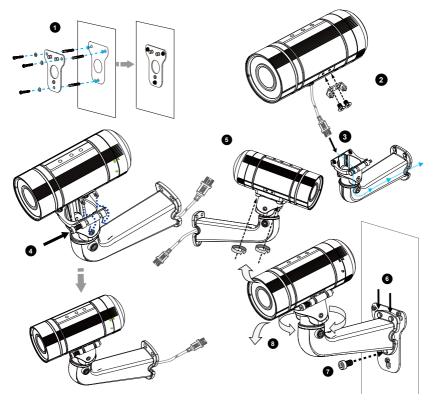


EN-3





Waterproof Connector




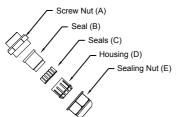

↑ IMPORTANT:

If you should need to open the front cover, make sure you tighten it up later so that the camera can be waterproof.




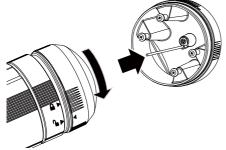

Pin Definitions

15 GND


AC 24V IN
AC 24V IN
DC12V+ IN
DC12V- IN
DI-
DI+
DO-
DO+
N/C
N/C
EXT_MIC
Audio Out
Audio GND
TV Out

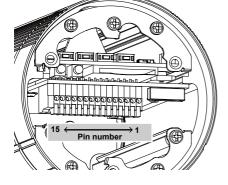




Assembling Steps

- 1. Disassemble the components of the waterproof connector into part (A) ~ (E) as shown above.
- 2. Open the rear cover of the Network Camera.
- Remove the rubber stopper from the bottom of the Network Camera and secure the screw nut (A) tightly.
- 4. You may choose to use AC24V or DC12V inputs as power source, please feed the power lines through the wall mount bracket and the waterproof connector (E --> D --> B --> A) as illustrated below. Pass power lines through the rubber seal (B) and then connect the power lines to the terminal block.
- 5. If you have external devices such as sensors and alarms, feed the cables through the wall mount bracket and the waterproof connector (E --> D --> B --> A) as the illustration shown below. Then refer to the pin definition to connect them to the general I/O terminal block. Note: The recommended cable gauge is 2.0 ~ 2.8 mm.
- 6. Push the seal (B) into the housing (D).
- 7. Insert the seals (C) into the empty holes on the seal (B) to avoid moisture.
- 8. Secure the sealing nut (E) tightly.

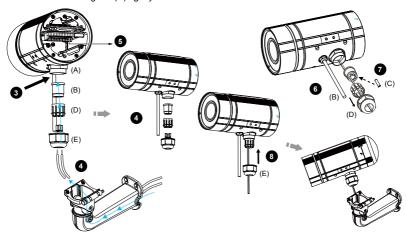


9. Open the aluminum foil vacuum bag and take out the desiccant bag. Attach the desiccant bag to the inner side of the rear cover, to under the insulation pad, and then tighten the rear cover. (Please replace the desiccant bag with a new one whenever you open the rear cover.)

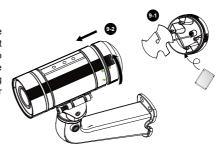




RJ45 Cable Connector


RJ45 Cable Dimension (unit: mm)

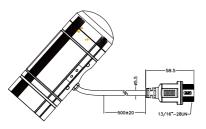



Components of the Waterproof Connector

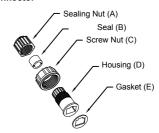



Assembling Steps

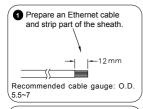

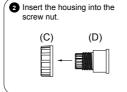


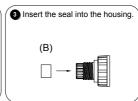


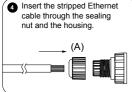

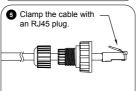



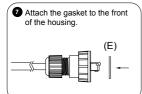

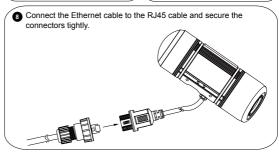






Network Deployment

Power over Ethernet (PoE)


When using a PoE-enabled switch

The Network Camera is PoE-compliant, allowing transmission of power and data via a single Ethernet cable. Follow the below illustration to connect the Network Camera to a PoE-enabled switch via Ethernet cable.

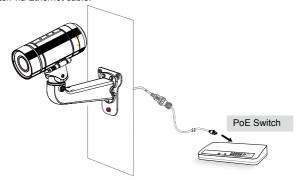

When using a non-PoE switch

Use a PoE power injector (optional) to connect between the Network Camera and a non-PoE switch.

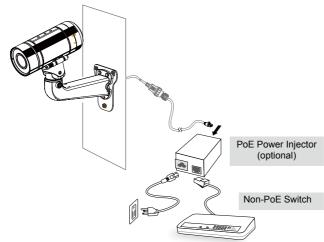

EN-7

Available from A1 Security Cameras www.a1securitycameras.com email: sales@a1securitycameras.com





- 1. Install "Installation Wizard 2" from the Software Utility directory on the software CD.
- The program will conduct an analysis of your network environment. After your network is analyzed, please click on the "Next" button to continue the program.
- The program will search for VIVOTEK Video Receivers, Video Servers, and Network Cameras on the same LAN.
- 4. After a brief search, the main installer window will pop up. Double-click on the MAC address that matches the one printed on the camera label or the S/N number on the package box label to open a browser management session with the Network Camera.



- 1. A browser session with the Network Camera should prompt as shown below
- You should be able to see live video from your camera. You may also install the 32channel recording software from the software CD in a deployment consisting of multiple cameras. For its installation details, please refer to its related documents.




For further setup, please refer to the user's manual on the software CD.




NOTE:

If you want to use the supplied sun shield for outdoor environments, please follow the steps below to install:

- 1. Tighten the supplied two hex couplers.
- 2. Attach the supplied sun shield to the Network Camera and slide it to the desired position.
- 3. Fix the sun shield with the supplied two screws.

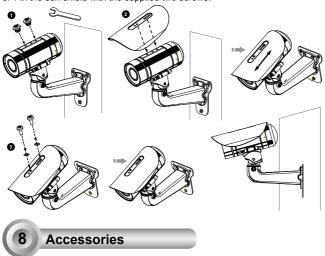

VIVOTEK also provides other accessories for versatile applications as the following illustrations. Please visit VIVOTEK's official website for more purchase information.

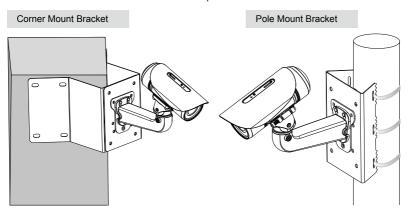



P/N:625021200G Rev. 1.0 All specifications are subject to change without notice. Copyright © 2013 VIVOTEK INC. All rights reserved.



VIVOTEK INC.

6F, No.192, Lien-Cheng Rd., Chung-Ho, New Taipei City, 235, Taiwan, R.O.C. | T: +886-2-82455282 | F: +886-2-82455532 | E: sales@vivotek.com

VIVOTEK USA, INC.

2050 Ringwood Avenue, San Jose, CA 95131 |T: 408-773-8686 | F: 408-773-8298 | E: salesusa@vivotek.com

Available from A1 Security Cameras

www.a1securitycameras.com email: sales@a1securitycameras.com