

# NetwayM

Power over the Ethernet

## NetWay M Series

PoE Managed Midspan Solution for  
Standard Network Infrastructure

**Models Include:**

### NetWay8M

- Eight (8) Port PoE Midspan Injector

### NetWay16M

- Sixteen (16) Port PoE Midspan Injector

## Installation Guide

**SECURITY**



DOC#: NETM Rev. 051619

**More than just power.™**

Installing Company: \_\_\_\_\_ Service Rep. Name: \_\_\_\_\_

Address: \_\_\_\_\_ Phone #: \_\_\_\_\_

# Table of Contents:

Overview .....	pg. 3
NetWayM Specifications .....	pg. 3
Common Specifications .....	pg. 3
Installation Instructions .....	pg. 4
Port Status and LED Flash Codes .....	pg. 4
NetWayM Front and Rear Panels Diagram .....	pg. 5
Technical Specifications .....	pg. 5
Port LED Definitions for NetWayXT and NetWayXTX Repeaters .....	pg. 6
Installing a NetWay1512 Adapter .....	pg. 6
Installing a NetWay3012 Adapter .....	pg. 6
Installing a NetWayXT/NetWayXTX Repeater Module .....	pg. 7
Port LED Definitions for NetWayXT Repeater .....	pg. 7
Port LED Definitions for NetWayXTX Repeater .....	pg. 7
Typical Application .....	pg. 8
CAT-5 Structured Cable Wiring Color Codes and PIN Configurations .....	pg. 8
<b>NetWay8M/NetWay16M User Interface and Programming</b>	
Port Priority .....	pg. 9
Port Identification .....	pg. 9
PoE Port Setup .....	pg. 10
PoE Port Shutdown .....	pg. 10
Power Allocation Mode .....	pg. 10
<b>Configuring NetWay8M/NetWay16M for Network Connection</b>	
Network Type .....	pg. 11
Additional Information .....	pg. 11
<b>Reset Features</b>	
Reset Password .....	pg. 12
Reset IP to Factory Settings .....	pg. 12
<b>Rack Mount Chassis Mechanical Drawing and Dimensions .....</b>	<b>pg. 15</b>
<b>Mounting Options .....</b>	<b>pg. 16</b>

## Overview:

Altronix NetWay8M and NetWay16M Managed Midspans provide power and pass data for PoE compliant cameras/edge devices. Cameras/edge devices may be located up to 100m from the NetWay unit. A NetWayXT/NetWayXTX repeater module can be utilized to extend the distance an additional 100m for a total range of up to 200m. A maximum range of 600m is possible using multiple repeaters, based on camera/device port requirement. NetWay Managed Midspans are capable of supporting non-PoE compliant fixed and PTZ IP cameras utilizing NetWay1512 or NetWay3012 adapters.

## NetWayM Specifications:

### NetWay8M:

- Eight (8) ports of cameras/edge devices over ethernet (CAT5) cable up to a distance of 100m per port.
- Input: 115VAC 60Hz, 3A.

### NetWay16M:

- Sixteen (16) ports of cameras/edge devices over ethernet (CAT5) cable up to a distance of 100m per port.
- Input: 115VAC 60Hz, 4.9A.

## Common Specifications:

### Agency Listings:

- **UL 60950-1** Information Technology Equipment.
- **UL 294\*** Access Control Systems.
- **CE** European Conformity.

### Power:

- Unit supplies PoE output voltage (55V), and up to 30W max. full power per port.

**Total power:** NetWay8M - 150W,  
NetWay16M - 300W.

- IEEE 802.3af and IEEE 802.3at compliant (PoE Plus).
- All output circuits are Class 2 power-limited.
- Short circuit protection.

### Functions:

- Programmable PoE shutdown for each port. Utilized to reset cameras/edge devices (see *Technical Specifications pg. 6*).
- PoE manual shutdown (For UL 60950-1 applications only). See *Technical Specifications, pg. 6*.
- Auto detection and protection of legacy non-PoE cameras/edge devices.

### Features:

- LAN or laptop connection enables programming of PoE shutdown and port monitoring.
- User interface (*Fig. 6, pg. 10*).
- Illuminated master power disconnect circuit breaker with manual reset (switch).
- Individual port status LEDs.
- IEC 320 - 3-wire grounded line cord (detachable).
- Unit can be rack or shelf mounted.
- 1U rack mount chassis for use in standard EIA 19" rack.

### Accessories:

#### NetWay1512:

- 15W adapter for non-PoE compliant IP cameras. (For UL 60950-1 applications only).

#### NetWay3012:

- 25W adapter for non-PoE compliant IP fixed or PTZ cameras. (For UL 60950-1 applications only).

#### NetWayXT:

- PoE repeater module extends range 100m (For UL 60950-1 applications only).

#### NetWayXTX:

- PoE+ repeater module extends range 100m.

### \* ANSI/UL 294 7th Ed. Access Control Performance Levels:

Destructive Attack - I; Endurance - N/A; Line Security - I; Stand-by Power - II.

Compliance with IEEE 802.3 (at or af) specifications was not verified as part of these requirements. Equipment is intended to comply with the following sections of the National Electrical Code, ANSI/NFPA 70:Article725.121. Not suitable for connection to outside wiring. Article 800 in the National Electrical Code, NFPA 70. Category 5e cabling is the minimum performance category recommended. The performance category utilized should match the transmission speed required at the installation site. The minimum conductor gauge permitted to connect between the PSE or power injector and the PD shall be 26AWG (0.13 mm<sup>2</sup>) for patch cords; 24AWG (0.21 mm<sup>2</sup>) for horizontal or riser cable. Products that utilize power over communications cable are typically connected through standard eight-pin RJ45 connectors. This power sourcing equipment (PSE) uses Mode B for power/data transfer. Please see connector configuration diagram (*Fig. 5a, pg. 8*).

Maximum power class supported by the PSE is 802.3at, class levels 1-4.

## Installation Instructions:


Wiring methods shall be in accordance with the National Electrical Code (ANSI/NFPA70), local codes, and the authorities having jurisdiction. NetWayM is not intended to be connected to outside plant leads. These products are for indoor use only and must be installed within the protected premises.

1. Attach mounting brackets to NetWayM unit for rack or wall mount installation (*Fig. 8 or 9, pg. 16*).  
Affix rubber pads to NetWayM for shelf installation (*Fig. 10, pg. 16*).
2. Secure the unit in a rack or place unit on a shelf as desired.  
**Note:** The following factors should be taken into consideration when installing these rack mount units:
  - a. The unit is to be installed in a space where the maximum ambient temperature does not exceed 104°F (40°C).
  - b. Take care to ensure there is sufficient air flow around the unit and that obstructions do not impede it.
  - c. When mounting units in rack, take care to avoid uneven loading which can cause a hazardous condition.
3. Set illuminated master power disconnect circuit breaker to the (OFF) position (*Fig. 1g, pg. 5*).
4. Plug the grounded AC line cord (included) into the IEC 320 connector of the NetWayM unit (*Fig. 1h, pg. 5*). Plug unit into a reliable earth grounded socket. When using multiple units, the sum of the individual name plate ratings should not exceed the supply circuit rating.  
**Do not connect to a receptacle controlled by a switch.**
5. Connect structured cables from port marked [IN] on NetWayM to the corresponding inputs of an ethernet switch or video server (*Fig. 1b, pg. 5, Fig. 5, pg. 8*).  
**Note:** All cabling and wire must be UL Listed and/or Recognized wire suitable for their application.
6. Connect structured cables from port marked [OUT] on NetWayM to PoE compliant camera/edge devices (*Fig. 1a, pg. 5, Fig. 5, pg. 8*).  
**Note:** For UL 294 applications the products are to be tested as part of a complete Access Control System and in accordance with UL Listed Access Control Devices.  
**Note:** All interconnected devices must be UL Listed.
7. Upon completion of wiring set illuminated master power disconnect circuit breaker to the RESET (ON) position (*Fig. 1g, pg. 5*).
8. Port status LEDs on the NetWayM will initialize when PoE devices are connected as follows:
  - LED will illuminate when devices are IEEE 802.3af compliant.
  - LED will blink once and illuminate when devices are IEEE 802.3at compliant (PoE Plus).
9. To utilize the PoE shutdown feature it is necessary to do the following:
  - a. Connect a device that will provide a low voltage trigger input (*see Technical Specifications pg. 5*) to terminals marked [+ - , PoE Shutdown] on the NetWayM (*Fig. 1e, pg. 5*). When voltage is applied, the PoE shutdown enabled PoE port(s) will drop to zero volts. Removing the low voltage trigger input at the [+ - , PoE shutdown] terminals will allow the PoE port(s) to operate normally and supply power to PoE compliant devices. Power will reset in approximately 4 seconds. Although there is no output voltage to power PoE devices during shutdown, data signals may still be present on the data pair lines of the structured cable.
  - b. Individual ports must be programmed utilizing the user interface (*see User Interface and Programming, pg. 9*).

### Port Status and LED Flash Codes:

Port Status	Flash Codes	Description
All Ports Off	Sequential LED Port Scan	No devices connected
Port Off	OFF	LED OFF
Port On	ON	LED ON
Class 4 detection Port	Blinks 2 times	Enables power to PoE devices.
Non-compliant Device	2Hz	Will prevent port from turning on.
Port Overload Fault	5Hz	Will prevent port from turning on.
4 Port Overload Grouped	5Hz	4 LEDs Will prevent ports from turning on.
8 Port Overload Grouped	5Hz	LEDs 1-8 Power Supply Overload for ports 1-8. LEDs 9-16 Power Supply Overload for ports 9-16.

Fig. 1 - NetWayM Series

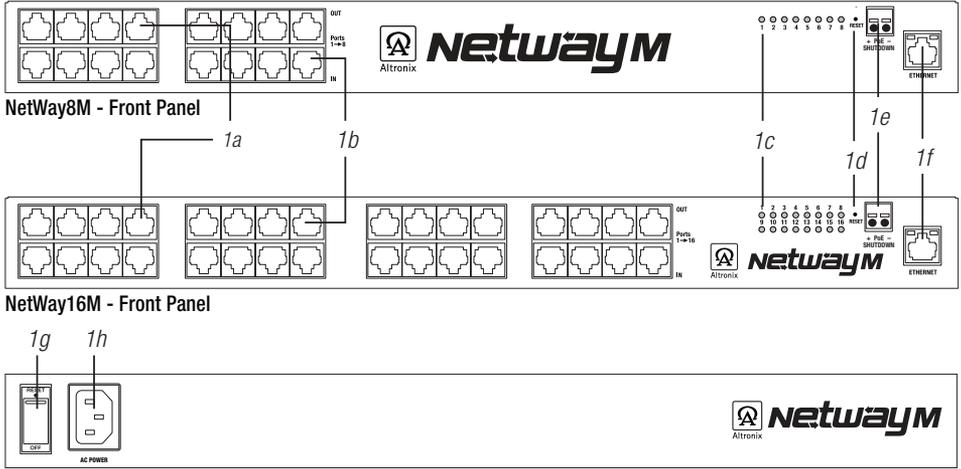

- 1a OUT 1-8 (NetWay8M), OUT 1-16 (NetWay16M): Structured cable to PoE compliant cameras/edge devices.
- 1b IN 1-8 (NetWay8M), IN 1-16 (NetWay16M): Structured cable to ethernet switch or video server.
- 1c LED(s) 1-8 (NetWay8M), 1-16 (NetWay16M): Port status LEDs.
- 1d Reset: Restores unit to factory settings.
- 1e + - , PoE Shutdown: Low voltage trigger input (see *Technical Specifications*, pg. 8).
- 1f Ethernet: LAN or laptop connection enables NetWayM programming and status monitoring.
- 1g Illuminated master power disconnect circuit breaker (switch):
  - **OFF Position:** Circuit breaker tripped. Switch not illuminated. **RESET (ON) position:** Switch illuminated.
- 1h IEC 320 Connector: 115VAC, 60Hz (grounded line cord included).

### Technical Specifications:

Parameter	Description
No. of Ports	NetWay8M - Eight (8) Ports. NetWay16M - Sixteen (16) Ports.
Input Power Requirements	NetWay8M: 115VAC 60Hz, 3A. NetWay16M: 115VAC 60Hz, 4.9A. Fuse: 4A/125V (NetWay16M has 2 fuses). <b>Note:</b> To reduce the risk of fire, replace only with same type and rating of fuse.
Indicators	Port Status LED
PoE Shutdown Voltage and Current Range	5VDC to 24VDC or 12VAC to 24VAC Minimum current: 2mA for 5VDC Minimum current for higher voltages: 10mA
Environmental Conditions	Operating Ambient Temperature: UL 60950-1: - 20°C to 40°C (- 4°F to 104°F). UL 294: - 20°C to 49°C (- 4°F to 120.2°F). Relative Humidity: 85%, +/- 5%. Storage Temperature: - 20° to 70°C (- 4°F to 158°F). Operating Altitude: - 304.8 to 3,048m.
Regulatory Compliance	<b>SECURITY</b>    <b>LISTED</b> UL/cUL Listed for Information Technology Equipment (UL 60950-1). UL Listed for Access Control Systems (UL 294). CE European Conformity

## Installing a NetWay1512 Adapter for 12VDC IP Cameras up to 13W:

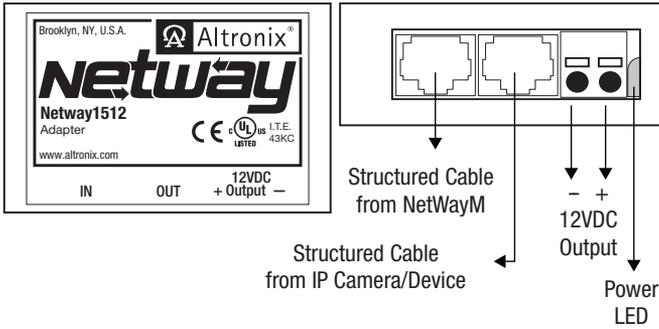


Fig. 2 - NetWay1512

1. Mount NetWay1512 in proximity to IP camera (Fig. 2, pg. 6). Affix one side of velcro (supplied) to NetWay1512 and the place the second side of the velcro in the desired location.
2. Connect structured cable from port marked [IN] on NetWay1512 to any ports marked [OUT] of NetWay8M/NetWay16M (Fig. 2, pg. 6, Fig. 1a, pg. 5).
3. Connect structured cable from port marked [OUT] on NetWay1512 to the IP camera (Fig. 2, pg. 6).
4. Connect 12VDC output from NetWay1512 terminals marked [- 12VDC +] to the power input of the IP camera (Fig. 2, pg. 6). Polarity must be observed.
5. Power LED indicator will illuminate on NetWay1512 under normal conditions (Fig. 2, pg. 6).

## Installing a NetWay3012 Adapter for 12VDC IP PTZ up to 25W:

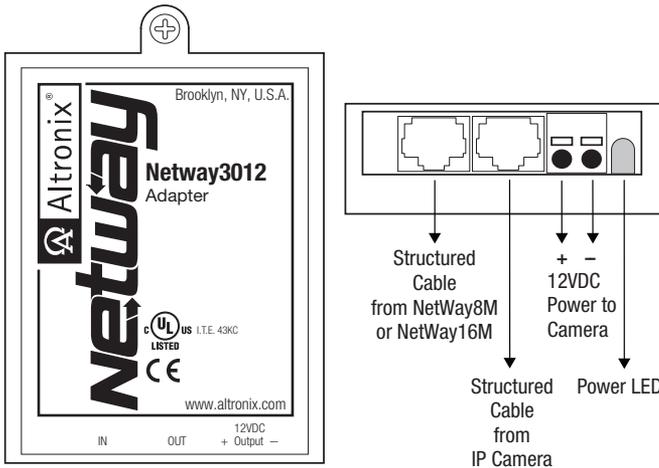


Fig. 3 - NetWay3012

1. Mount NetWay3012 in proximity to IP camera utilizing mounting hole (Fig. 3, pg. 6). Use a proper fastener and/or wall anchor when securing NetWay3012 to the wall.
2. Connect structured cable from port marked [IN] on NetWay3012 to ports marked [OUT] of NetWay8M/NetWay16M (Fig. 3, pg. 6, Fig. 1a, pg. 5).
3. Connect structured cable from port marked [OUT] on NetWay3012 to the IP fixed or PTZ camera (Fig. 3, pg. 6).
4. Connect 12VDC output from NetWay3012 terminals marked [+ 12VDC -] to the power input of the IP camera (Fig. 3, pg. 6). Polarity must be observed.
5. Power LED indicator will illuminate on NetWay3012 under normal conditions (Fig. 3, pg. 6).

## Installing a NetWayXT/NetWayXTX Repeater Module:

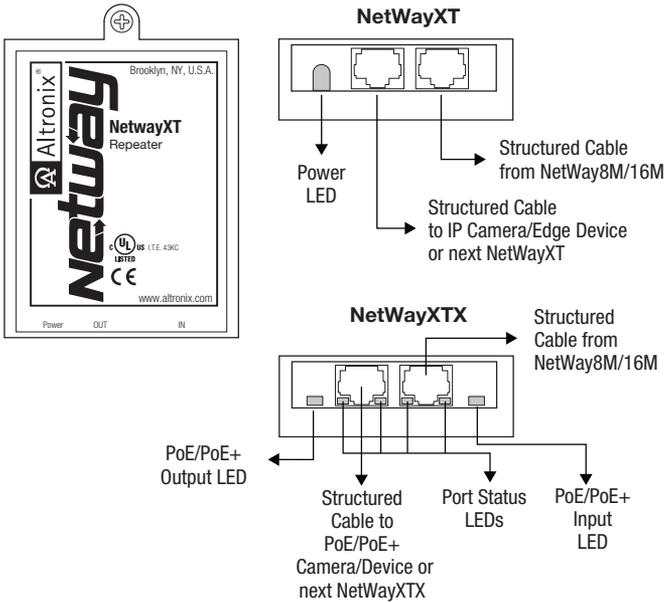


Fig. 4 - NetWayXT/NetWayXTX

**NetWayXT will work only with PoE devices. NetWayXTX will work with PoE/PoE+ devices.**

1. Mount NetWayXT/NetWayXTX in desired location utilizing the mounting hole (Fig. 4, pg. 7). Use a proper fastener and/or wall anchor when securing NetWayXT/NetWayXTX to the wall.
2. Connect structured cable from port marked [OUT] on NetWay to port marked [IN] on the NetWayXT/NetWayXTX (Fig. 4, pg. 7, Fig. 1a, pg. 5).
3. Connect structured cable from port marked [OUT] on NetWayXT/NetWayXTX to the PoE/PoE+ camera/edge device or next NetWayXT/NetWayXTX repeater (Fig. 4, pg. 7).
4. Port status LEDs will illuminate on NetWayXT/NetWayXTX indicating the port is operational (refer to LED Definitions).
5. Power LED will illuminate indicating 12VDC output.

### Port LED Definitions for NetWayXT Repeater:

Status	Green LED	Yellow LED
OFF	Indicates it is connected as 10Base-T or no link.	Indicates no link.
ON	Indicates it is connected as 100Base-TX.	Indicates a link.
Blinking	—	Indicates activity.

### Port LED Definitions for NetWayXTX Repeater:

Status	PoE/PoE+ Output LED	PoE/PoE+ Input LED	Yellow LED
OFF	No PoE/PoE+ Output	No PoE/PoE+ Input	Indicates no link.
ON	Normal PoE/PoE+ Output	PoE/PoE+ Input	Indicates a link.
Blinking	—	—	Indicates activity.

# NetWay8M/NetWay16M Typical Application:

Fig. 5


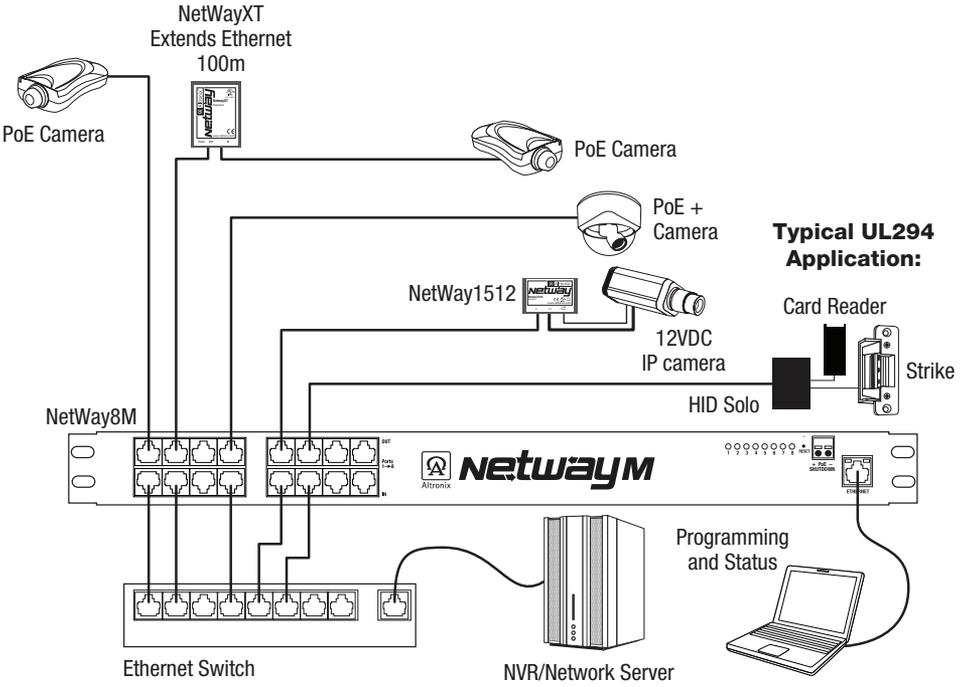


Fig. 5a - CAT-5 Structured Cable Wiring Color Codes and PIN Configuration

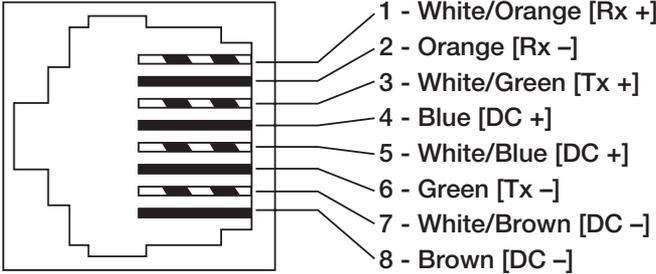

## NetWay8M/NetWay16M User Interface and Programming:

**Note:** A constant PC connection is not required for proper operations and is used as a local programming/monitoring tool only.

**Step 1.** Set Local Area Connection of your laptop to Static IP mode.

Static IP address of the laptop must be assigned to the same network as the current IP address of NetWay8M/NetWay16M. The default IP address of NetWayM units is 192.168.168.168.

This manual assumes that it has not been changed by user.

### For Windows XP:

- a. Open Network Connections by clicking **Start** button, then clicking **Settings**, then clicking **Network Connections**.
- b. Right click the **Local Area Connection**. Click **Properties**. Administrator permission required. If you are prompted for an administrator password or confirmation, type the password or provide confirmation.
- c. Double click **Internet Protocol (TCP/IP)** menu item.
- d. Choose the **Use the following IP address** option.
- e. Set the IP address to 192.168.168.15 (or another valid IP address on the same network).
- f. Click **OK**. Close all windows.

### For Windows 7:

- a. Open Network Connections by clicking the **Start** button, clicking **Control Panel**, clicking **Network and Internet**, clicking **Network and Sharing Center**, and then clicking **Change Adapter Settings**.
- b. Right click the **Local Area Connection** icon, and then click **Properties**. Administrator permission required. If you are prompted for an administrator password or confirmation, type the password or provide confirmation.
- c. Click the **Networking** tab. Under this connection uses the following items, click either **Internet Protocol Version 4 (TCP/IPv4)** and then click **Properties**.
- d. Choose the **Use the following IP address** option.
- e. Set the IP address to 192.168.168.15 (or another valid IP address on the same network).
- f. Click **OK**. Close all windows.

**Step 2.** Connect a laptop or PC to the Ethernet port of your NetWayM unit.

The NetWayM unit should be powered up at this moment.

**Step 3.** Open a browser window (it is necessary to update your browser software to the latest version so that the pages display and function correctly).

**Step 4.** Enter the NetWayM IP address (the default IP address is 192.168.168.168) into the address bar. Status page will be displayed.

**Step 5.** Click **Setup** link. Setup page will be displayed. You may now program your NetWayM.

All NetWayM units come factory set:

- a. Ports - Enabled.
- b. Ports - PoE Shutdown Disabled.
- c. Power Allocation Mode - Class restricted.

## Port Priority:

NetWayM port priority is designated 1 through 8, with 1 as the highest and 8 as the lowest ports so that power will be allocated to the port with the highest priority first and the lowest priority last. This will ensure that ports with the higher priority will continue to operate in the event the NetWayM is overloaded.

**NetWay8M** - Port priority is factory set at 1 through 8 for ports 1 through 8.

**NetWay16M** - Port priority is factory set at 1 through 8 for ports 1 through 8 and 1 through 8 for ports 9 through 16.

## Port Identification:

NetWayM allows you to identify each port (ID up to 8 characters).

1. Type the desired ID into the text box for each corresponding port.
2. Click **Submit** to save the changes or proceed with programming.

## PoE Port Setup:

Individual ports may be disabled if those ports are not used or to avoid the connection of unauthorized PoE devices.

1. To disable one or more ports click on the **Disable** radio button(s) in the PoE column (Fig. 6, pg. 10).
2. To enable one or more ports click on the **Enable** radio button(s) in the PoE column (Fig. 6, pg. 10).

**Note:** To enable all ports click on the **Enable All** link below PoE column.

3. Click **Submit** to save the changes or proceed with programming.

## PoE Port Shutdown:

Individual ports may be set for PoE shutdown. PoE shutdown affects only enabled ports and only occurs when a trigger input is applied to the PoE shutdown terminals on the NetWayM.

1. To enable PoE shutdown for one or more ports click on the **Enable** radio button(s) in the PoE shutdown column (Fig. 6, pg. 10).
2. To disable PoE shutdown for one or more ports click on the **Disable** radio button(s) in the PoE shutdown column (Fig. 6, pg. 10).

**Note:** To enable or disable PoE shutdown for all ports click on corresponding link below PoE shutdown column.

3. Click **Submit** to save the changes or proceed with programming.

## Power Allocation Mode:

NetWayM features the ability to select how total power is allocated to the ports.

- **Class Restricted Power Mode** - each port will be allocated the maximum rated power that the PoE device will broadcast.
- **Dynamic Power Mode** - each port will supply the specific amount of power that the PoE device requires for operation.

**Note:** Be sure not to exceed the total power NetWay8M/NetWay16M is rated at.

1. Click on the corresponding radio button to set the Power Mode desired (Fig. 6, pg. 10).
2. Click **Submit** to save the changes or proceed with programming.

Fig. 6

The screenshot displays the NetWayM web interface for PoE Port Setup. The top navigation bar includes 'Status', 'Setup', 'Network', 'Users', 'Timers', 'Log', and 'Logout'. The main header shows 'netway16M' and the date/time 'Thursday, Nov. 7 2019 [ 12:05:56 pm ]' along with a 'Sync with device' button. Below the header, the 'Site ID' is set to 'test16' with an 'Update Site ID' button. The main configuration area is a table with 16 rows, each representing a port. The columns are 'Port ID', 'Power Cycle Duration', 'Port Status', and 'PoE Shutdown'. The 'Port ID' column contains values from 1 to 16. The 'Power Cycle Duration' column has a value of 5 for ports 1-10 and 37 for port 7. The 'Port Status' column shows 'ON' and 'Turn Off' buttons. The 'PoE Shutdown' column has radio buttons for 'Enable' and 'Disable'. At the bottom of the page, there is a 'High Temperature Threshold' field with a value of 90 and a 'Set New Threshold' button, and a 'Save Settings' button.

Port	Port ID	Power Cycle Duration	Port Status	PoE Shutdown
1	Port ID 1	5	ON Turn Off	Enable Disable
2	Port ID 2	5	ON Turn Off	Enable Disable
3	Port ID 3	5	ON Turn Off	Enable Disable
4	Port ID 4	5	ON Turn Off	Enable Disable
5	Port ID 5	5	ON Turn Off	Enable Disable
6	Port ID 6	5	ON Turn Off	Enable Disable
7	Port ID 7	37	ON Turn Off	Enable Disable
8	Port ID 8	5	ON Turn Off	Enable Disable
9	Port ID 9	5	ON Turn Off	Enable Disable
10	Port ID 10	5	ON Turn Off	Enable Disable
11	Port ID 11	5	ON Turn Off	Enable Disable
12	Port ID 12	5	ON Turn Off	Enable Disable
13	Port ID 13	5	ON Turn Off	Enable Disable
14	Port ID 1456	5	ON Turn Off	Enable Disable
15	Port ID 15	5	ON Turn Off	Enable Disable
16	Port ID 16	5	ON Turn Off	Enable Disable

High Temperature Threshold  
90 Set New Threshold

Save Settings

## Configuring NetWay8M/NetWay16M for Network Connection:

Since every Network Configuration is different, please check with your Network Administrator to see if your NetWay8M/NetWay16M should use static IP addresses, or DHCP assigned IP addresses and/an Inbound Port assignment prior to setting up network connection.

1. Click **Network Settings** link.

If you are prompted for an administrative password, type and submit the password.

**Note:** Default settings have password requirements turned off .

2. Network Setup page will be displayed.

You may now configure your NetWay8M/NetWay16M for network connection.

Figure 6 is a screenshot of the NETWORK SETTING MENU. This menu is for configuring the NetWay8M/NetWay16M units for a network connection.

		<b>Network Settings</b>
Status : <a href="#">Setup</a>		
IP Address Method	<input type="text" value="Static"/>	
IP Address	<input type="text" value="198.162.1.100"/>	
Subnet Mask	<input type="text" value="255.255.255.0"/>	
Inbound Port	<input type="text" value="80"/>	
Host Name	<input type="text" value="AnyHostname"/>	
<input type="button" value="Submit"/>		

### Network Type:

Static IP: User can set a fixed IP for network connection.

DHCP: DHCP server in LAN will automatically assign IP configuration for the network connection

IP: This field shows the NetWay8M/NetWay16M current IP Address. A static IP address must be set manually. If DHCP this value will be assigned automatically.

Subnet Mask: This field shows the subnet mask for your network so the NetWay8M/NetWay16M will be recognized within the network. If DHCP is selected, this value will be assigned automatically.

Inbound Port: Port number for HTTP/WEB communication.

Host Name: Name of the NetWay8M/NetWay16M device on the LAN

### Additional information:

1. If using DHCP, all settings will be detected automatically.

While DHCP is a useful tool for determining the network settings, if you set up your NetWay8M/NetWay16M in this manner its IP address may change at different times for different reasons, particularly after a power failure. If the IP address of the NetWay8M/NetWay16M changes, you may have difficulties accessing your NetWay8M/NetWay16M locally and/or remotely.

It is strongly recommended that you connect via host name when units configured as DHCP.

Please do not set the DHCP address issued to the NetWay8M/NetWay16M by the router as its static IP address unless you take specific steps that program your router to prevent such address conflicts.

2. If using a Static IP (recommended), you will need to input the information manually. In order for DDNS to work, you must enter valid data, compatible with your network, for all of the network setting fields:

IP address, Subnet Mask, Inbound Port and Host Name.

3. If you are connecting through a router, make sure that you have 'opened up' all the required network ports in the port forwarding section of your router's setup options. That is, you have directed the router to send any incoming traffic using those IP ports to the LAN IP address of the NetWay8M/NetWay16M.

Useful information about router port forwarding can be found at [www.portforward.com](http://www.portforward.com). Different routers may use different terms for port forwarding function. For instance, D-Link calls it virtual server, Netopia calls it pinholes.

The default port for NetWay8M/NetWay16M is: 80.

**Note:** Port 80 is the default port used for web browsing. Because of this, in order to prevent the average user from hosting a web server, most ISPs BLOCK traffic using port 80 from reaching the average site. If you only plan to monitor your NetWay8M/NetWay16M on a LAN, you can use port 80, and don't have to concern yourself with routers. However, if you desire remote access to your NetWay8M/NetWay16M, you MUST select functional ports and set up the port forwarding in your router. Other ports, such as 8080 and 8000 are sometimes blocked by ISPs as well. What port(s) should be used? There are 65,535 valid IP ports to choose from. These are broken down into three groups:

- Well Known Ports 0 through 1023
- Registered Ports 1024 through 49151
- Dynamic and/or Private Ports 49152 through 65535

So, rather than encounter a port conflict by choosing a port commonly used for another purpose (like port 25 for SMTP mail or port 448 for secure sockets), choose an 'unusual' port number. For example, add 50,000 to your house number: 50,123 is less likely to lead to a port conflict. For a list of the known and registered ports, see <http://www.iana.org/assignments/port-numbers>.

## **Reset Features:**

### **Reset Password:**

1. Set illuminated master power disconnect circuit breaker to the (OFF) position (*Fig. 1g, pg. 5*).
2. Set illuminated master power disconnect circuit breaker to the RESET (ON) position (*Fig. 1g, pg. 5*) while depressing the [RESET button] on the front of the NetWayM (*Fig. 1d, pg. 5*).
3. NetWayM status LEDs will display a flashing pattern which indicates reset was successful (*Fig. 1c, pg. 5*).

### **Reset IP to Factory Settings:**


1. During normal operation depress the [RESET button] on the front of the NetWayM for approximately 1 second (*Fig. 1d, pg. 5*).
2. NetWayM status LEDs will display a flashing pattern which indicates reset was successful (*Fig. 1c, pg. 5*).
3. Factory settings are: DHCP server and the IP address is [192.168.168.168].

## Notes:

## Notes:

# NetWay8M/NetWay16M Rack Mount Chassis Mechanical Drawing and Dimensions:

Fig. 7

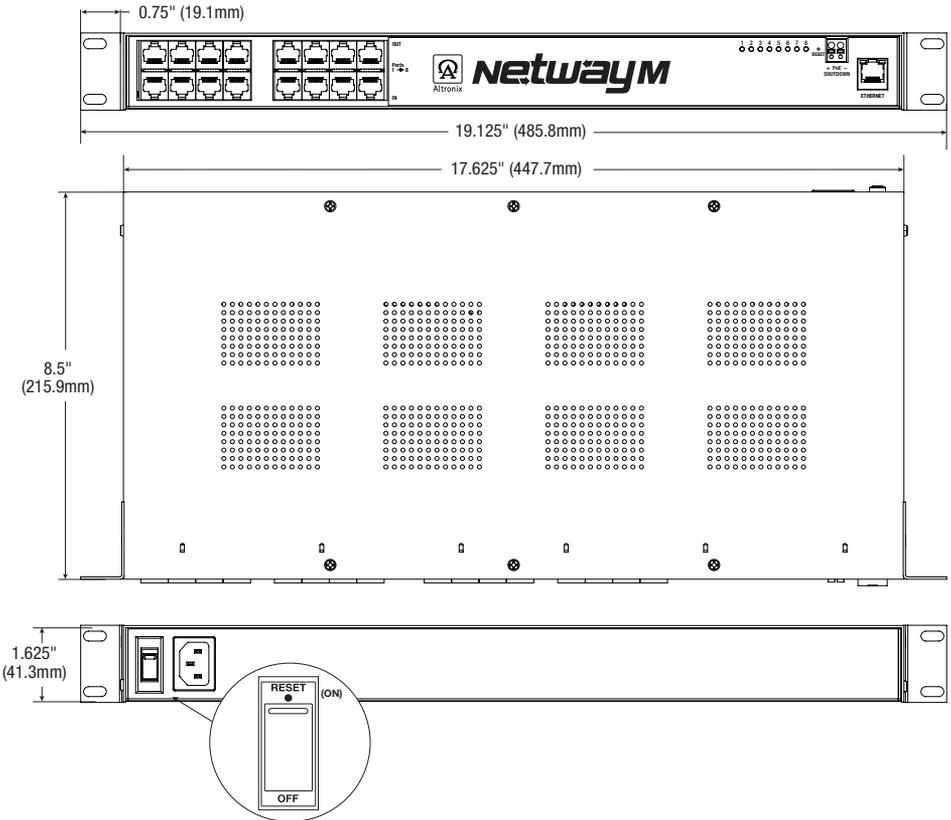

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of an insulated DANGEROUS VOLTAGE within the product's enclosure that may be of sufficient magnitude to constitute an electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN




**CAUTION:** To reduce the risk of electric shock do not open enclosure. There are no user serviceable parts inside. Refer servicing to qualified service personnel.

## Mounting Options:

### Rack Mount Installation


1. Remove and discard factory installed screws from both sides of rack chassis (Fig. 8a).
2. Install mounting brackets (A) on the left and right side of rack chassis using the four (4) flat head screws (B) (included) (Fig. 8b).
3. Place unit into desired EIA 19" rack position and secure with mounting screws (not included) (Fig. 8c).

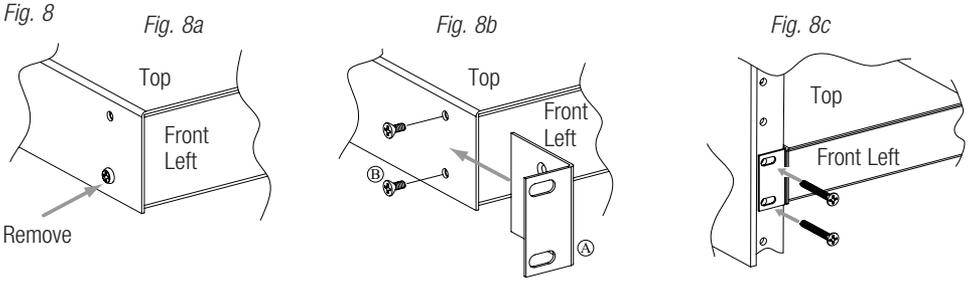

### Wall Mount Installation


1. Install mounting brackets (A) on the left and right side of rack chassis using four (4) flat head screws (B) (included) (Fig. 9a).
2. Place unit at desired location and secure with #6 size screws or larger (not included) (Fig. 9b).

**Caution:** It is necessary to make sure mounting screws are securely fastened to a beam when installing the unit vertically.

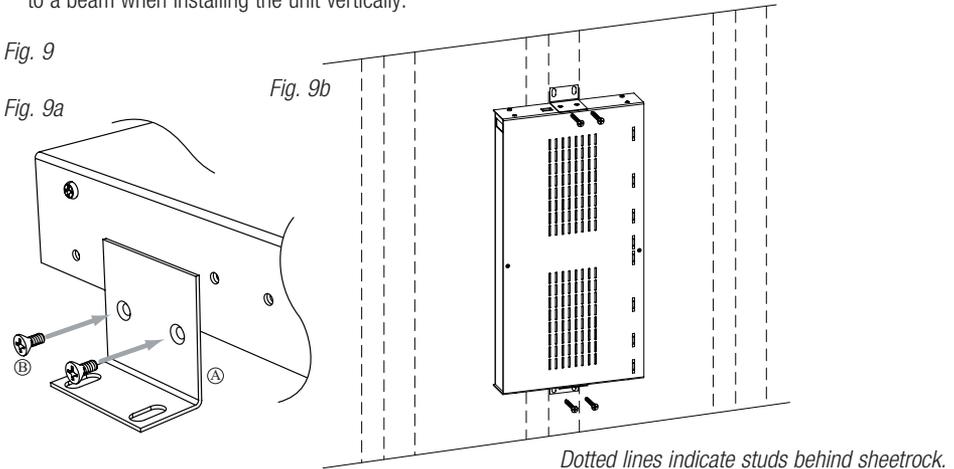

### Shelf Installation

1. Position and affix rubber pads (C) (included) at each corner on the bottom of the unit (Fig. 10).
2. Place unit in desired location.

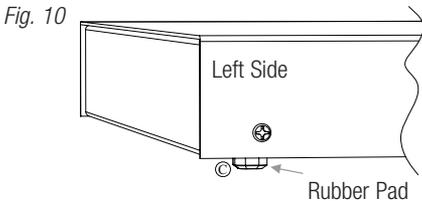

#### Mounting Hardware (Included):

-  (A) Two (2) mounting brackets
-  (B) Six (6) flat head screws for mounting brackets.
-  (C) Four (4) rubber pads.

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056  
 website: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty  
 IINetWay8M/NetWay16M H24U

