

GV-Expansion System V3 64 Bays

User's Manual





© 2018 GeoVision, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of GeoVision.

Every effort has been made to ensure that the information in this manual is accurate.

GeoVision, Inc. makes no expressed or implied warranty of any kind and assumes no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages arising from the use of the information or products contained herein. Features and specifications are subject to change without notice.

GeoVision, Inc.

9F, No. 246, Sec. 1, Neihu Rd.,

Neihu District, Taipei, Taiwan

Tel: +886-2-8797-8377

Fax: +886-2-8797-8335

<http://www.geovision.com.tw>

Trademarks used in this manual: *GeoVision*, the *GeoVision* logo and GV series products are trademarks of GeoVision, Inc. *Windows*, *Windows XP*, *Windows Vista* and *Windows 7* are registered trademarks of Microsoft Corporation.

August 2018

Table of Contents

Preface	2
Before You Begin	3
Safety Guidelines.....	3
Controller Configurations.....	3
Packaging, Shipment and Delivery.....	3
Unpacking the Shipping Carton.....	4
Chapter 1 Product Introduction	6
1.1 Technical Specifications	7
Chapter 2 Identifying Parts of GV-Expansion System V3	8
2.1 Main Components.....	8
2.1.1 Front View.....	8
2.1.1.1 LCD Display Panel LED.....	9
2.1.1.2 HDD Status LEDs	10
2.1.2 Rear View.....	11
2.2 JBOD Controller Module	12
2.3 Power Supply Fan Module (PSFM)	13
2.3.1 PSFM Panel.....	15
2.4 Fan Module.....	16
2.4.1 Turbo Fan	18
2.5 Expander Module.....	19
2.5.1 Expander Module Panel	19
2.6 Disk Drive Installation into the Disk Slot.....	20
2.6.1 To install a SAS disk drive or SATA disk drive in a disk tray:.....	22
Chapter 3 Getting Started with GV-Expansion System V3	26
3.1 Installing the Rails and Mounting into Rack	26
3.2 Removing the Disk Array from the Rack.....	41
3.3 Preparing the JBOD and Connecting to GV-Expansion System V3 64 Bays.....	43
3.4 Preparing the JBOD and Connecting to SAS HBA in Host System	43
3.5 Powering On	44
3.6 Powering Off	45
Chapter 4 Maintenance.....	46
4.1 Upgrading the JBOD Controller Firmware.....	46

Preface

About this manual

This manual provides information regarding the hardware features and installation of **GV-Expansion System V3 64 Bays**. Information contained in the manual has been reviewed for accuracy, but not for product warranty because of the various environment/OS/settings. Information and specifications will be changed without further notice.

This manual uses section numbering for every topic being discussed for easy and convenient way of finding information in accordance with the user's needs. The following icons are being used for some details and information to be considered in going through with this manual:



NOTES:

These are notes that contain useful information and tips that the user must give attention to in going through with the system operation.



IMPORTANT!

These are the important information that the user must remember.



WARNING!

These are the warnings that the user must follow to avoid unnecessary errors and bodily injury during hardware and software operation of the subsystem.



CAUTION:

These are the cautions that user must be aware of to prevent damage to the subsystem and/or its components.

Copyright

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent.

Trademarks

All products and trade names used in this document are trademarks or registered trademarks of their respective owners.

Changes

The material in this document is for information only and is subject to change without notice.

Before You Begin

Before going through with this manual, you should read and focus on the following safety guidelines. Notes about the subsystem's controller configuration and the product packaging and delivery are also included here.

Safety Guidelines

To provide reasonable protection against any harm on the part of the user and to obtain maximum performance, user is advised to be aware of the following safety guidelines particularly in handling hardware components:

Upon receiving of the product:

- ❖ Place the product in its proper location.
- ❖ Do not try to lift it by yourself alone. Two or more persons are needed to remove or lift the product to its packaging. To avoid unnecessary dropping out, make sure that somebody is around for immediate assistance.
- ❖ It should be handled with care to avoid dropping that may cause damage to the product. Always use the correct lifting procedures.

Upon installing of the product:

- ❖ Ambient temperature is very important for the installation site. It must not exceed 30°C. Due to seasonal climate changes; regulate the installation site temperature making it not to exceed the allowed ambient temperature.
- ❖ Before plugging-in any power cords, cables and connectors, make sure that the power switches are turned off. Disconnect first any power connection if the power supply module is being removed from the enclosure.
- ❖ Outlets must be accessible to the equipment.
- ❖ All external connections should be made using shielded cables and as much as possible should not be performed by bare hand. Using anti-static hand gloves is recommended.
- ❖ In installing each component, secure all the mounting screws and locks. Make sure that all screws are fully tightened. Follow correctly all the listed procedures in this manual for reliable performance.
- ❖ If you are in an area with unstable voltage, make sure to install an automatic voltage regulator (AVR) or a UPS power supply with AVR function, to maintain a constant voltage.
- ❖ All damages to the power supply caused by unstable voltage are not included in the 2-year warranty service.

Controller Configurations

This JBOD subsystem supports single JBOD controller configurations.

Packaging, Shipment and Delivery

- ❖ Before removing the subsystem from the shipping carton, you should visually inspect the physical condition of the shipping carton.
- ❖ Unpack and verify that the contents of the shipping carton are complete and in good condition.
- ❖ Exterior damage to the shipping carton may indicate that the contents of the carton are damaged.
- ❖ If any damage is found, do not remove the components; contact the dealer where you purchased the subsystem for further instructions.

Unpacking the Shipping Carton

The shipping carton contains the following:

	GV-Expansion System V3 64 Bays
	64 pairs of HDD side brackets
	Two (2) Power cords
	One (1) mini SAS HD cable
	One (1) external serial cable RJ11-to-DB9
	One (1) Disk Tool

	Key of Top Cover
	Screws
	Download Guide
	Rail Kit
	Cable Arm



NOTE: If any damage is found, contact the dealer or vendor for assistance.

Chapter 1 Product Introduction



GV-Expansion System V3 64 Bays

GV-Expansion System V3 64 Bays is a 19-inch 4U rackmount JBOD unit. It is a versatile SAS II / SATA III disk expansion system, ideal for high capacity and scalability storage in IT demands. It offers high density storage, hardware redundancy and easily integrates into versatile applications that request high performance and high scalability.

GV-Expansion System V3 64 Bays comes with single JBOD controller configuration for options. It features a modular architecture for all key components which ease system maintenance and management.

Highest Density Available

- 4U chassis with 64 bays carriers
- Support the 2.5" / 3.5" enterprise class SAS II /SATA III HDD drives

High Availability

- Single SAS JBOD controller module
- Each SAS JBOD controller module consist of three 4x mini SAS HD ports

Power Supply

- Power supply and cooling system contained in 1 module for efficient cooling
- Two 1100W redundant hot swappable power supplies

Enclosure

- Incorporates a cableless design for maximum signal integrity
- Utilizes industry-standard SCSI enclosure services (SES) to monitor enclosure and disk environmental conditions

Enclosure monitoring

- System LED indications
- Fan speed monitoring
- Power supply monitoring
- System voltage monitoring
- System temperature monitoring
- System alarm

1.1 Technical Specifications


JBOD Controller	Single
Host Interface	One 4x mini SAS HD (12Gb/s)
Disk Interface	6Gb/s SAS, 6Gb/s SATA
SAS expansion	Two 4x mini SAS HD (12Gb/s)
Enclosure	
Platform	Rackmount
Form Factor	4U
# of Hot Swap Trays	64
Tray Lock	Yes
Disk Status Indicator	Access / Fail LED
Backplane	SAS / SATA Single BP
# of PS/Fan Modules	1100W x 2 w/PFC
# of Fans	15
Monitor port support	Yes
Power requirements	AC 90V ~ 254V Full Range, 50Hz~60Hz
Environmental	
Relative Humidity	10% ~ 85% Non-condensing
Operating Temperature	10°C ~ 40°C (50°F ~ 104°F)
Physical Dimension	482.6 (W) x 177 (H) x 880 (D) mm / 19 x 6.97 x 34.6 in
Weight (Without Disk)	43.5 / 45 Kg

Specification is subject to change without notice.

Chapter 2 Identifying Parts of GV-Expansion System V3

2.1 Main Components

2.1.1 Front View

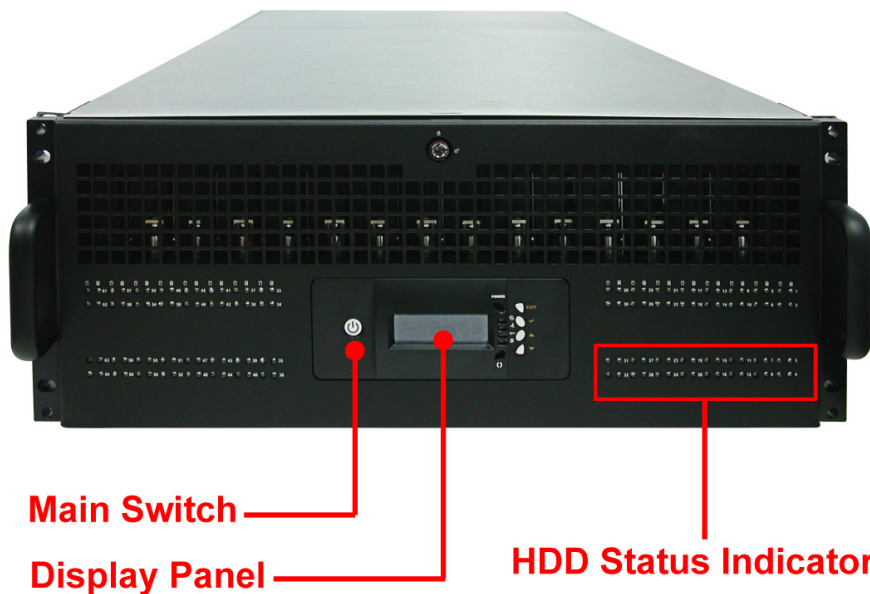

IMPORTANT: When powering off GV-Expansion System V3, turn off first the Main Switch and allow at least 3 minutes (during which each disk slot starting from slot #1 until slot #64 will be powered down) for GV-Expansion System V3 to shutdown properly. Then turn off the switches of the 2 Power Supply Fan Modules.

2.1.1.1 LCD Display Panel LED




Part	Function
Power LED	Green indicates power is ON.

Main Switch Button	
Flashing Blue	Indicates that the power cords are inserted and/or indicates the 2 power supply switches are turn on.
Light Blue	Indicates that the sytem is on.
No Light	Indicates that the whole system is power off.


2.1.1.2 HDD Status LEDs

The Front Panel shows the disk drives status.

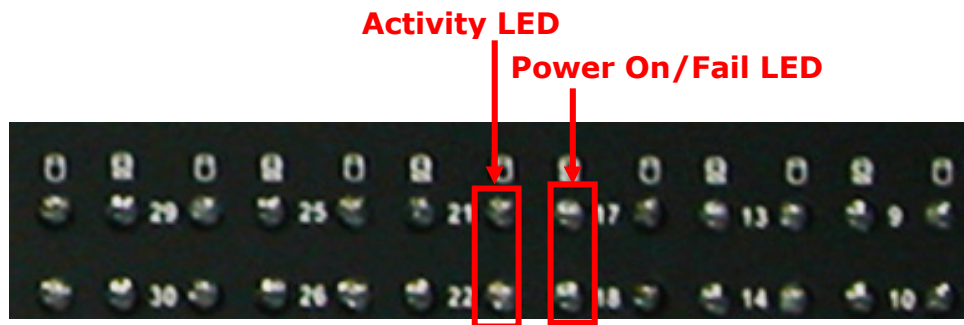

Indicator	Color	Description
Activity LED	Blue Blinking	Indicates the disk drive is busy or being accessed.
Power On/Fail LED	Green	Indicates the disk drive in this slot is good.
	RED	Indicates the disk drive in this slot is defective or failed.
	LED is off	Indicates there is no disk drive in this slot.

2.1.2 Rear View

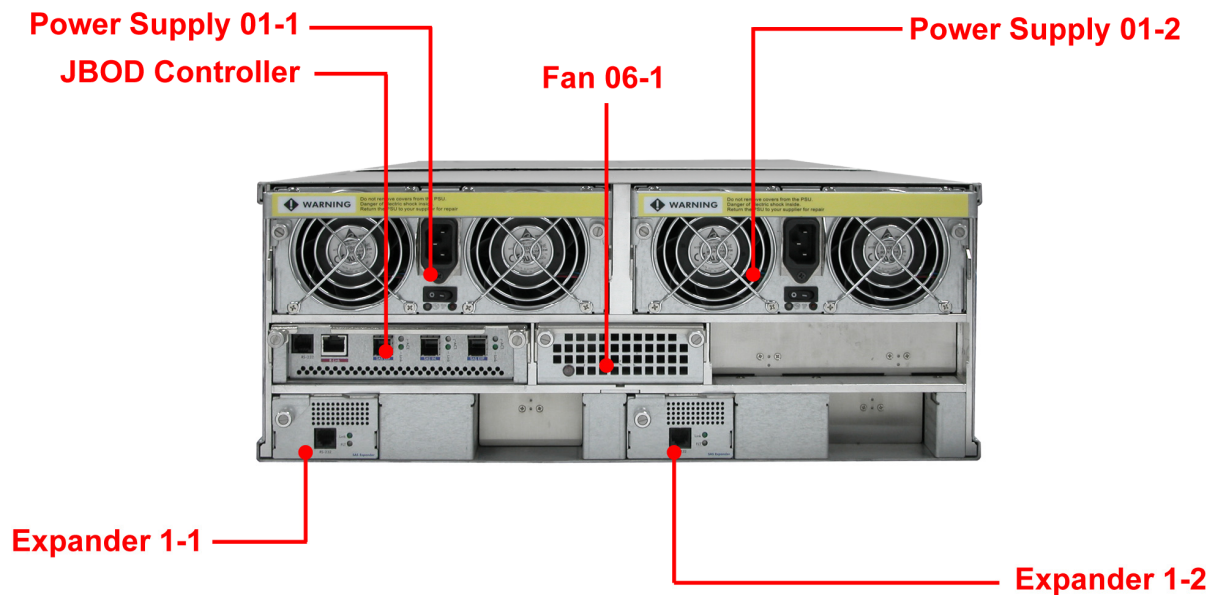


NOTE: Each Power Supply Module has 1 Power Supply and 5 Fans. GV-Expansion System V3 is logically divided into two enclosures for hardware monitoring.

The functions of the Expander Modules are as follows:

Module:	Function/Description:
Expander Module 1-1	Monitors Enclosure 1 (Disk slots 1 to 32, Power Supply 01-1, Fans 01-1, 02-1, 03-1, 04-1, and 05-1, 07-1, 08-1 and Turbo Fan 06-1). Note: "-1" means enclosure 1.
Expander Module 2-1 (for Controller 2)	Same function as Expander 1-1
Expander Module 1-2	Monitors Enclosure 2 (Disk slots 33 to 64, Power Supply 01-2, Fans 01-2, 02-2, 03-2, 04-2, 05-2, 06-2 and 07-2). Note: "-2" means enclosure 2.
Expander Module 2-2 (for Controller 2)	Same function as Expander 1-2

2.2 JBOD Controller Module

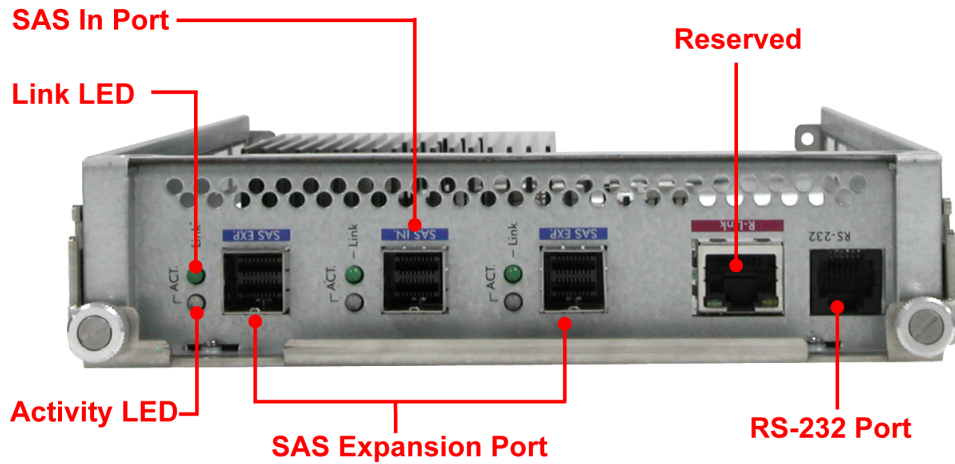

Part	Description
SAS In Port	Use to connect to SAS HBA or to GV-Expansion System V3's SAS Expansion Port.
SAS Expansion Port	Use to connect to the SAS In Port of another GV-Expansion System V3.
RS-232 Port	Use to upgrade the firmware of the JBOD controller. Connect the RJ11-to-DB9 serial cable to your system's serial port.

Indicator	Color	Description
Link LED	Green	Indicates expander has connected or linked.
Activity LED	Blinking Blue	Indicated the expander is busy and being accessed.

2.3 Power Supply Fan Module (PSFM)

GV-Expansion System V3 64 Bays contains **two 1100W Power Supply/Fan Modules**. All PSFM are inserted at the rear of the chassis.



Front Panel




Rear Side



NOTE: Each PSFM delivers Full-Range 100V ~ 240V (+/-10%) voltage AC electricity. Each PSFM consists of 1 power supply and 5 fans. Two Fans are located at the panel side, and three fans are located in rear side of the PSFM.

2 Identifying Parts of GV-Expansion System V3

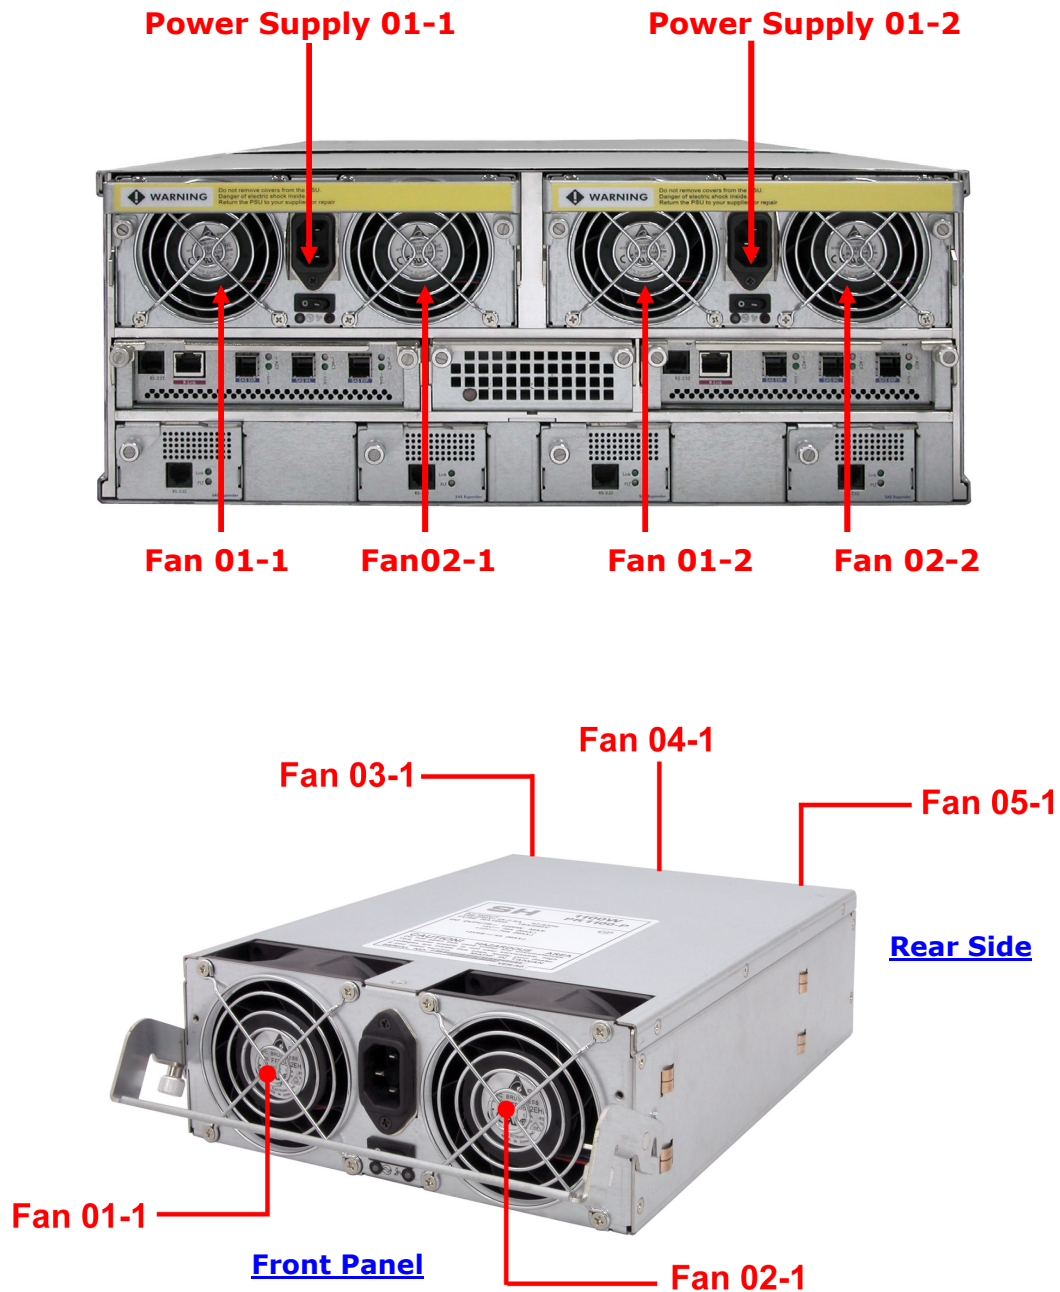


NOTE: The first PSFM (01-1, on the left side of enclosure) has five fans: Fan 01-1 and Fan 02-1 on the front panel; and Fan 03-1, Fan 04-1 and Fan 05-1 on the rear side.

The second PSFM (01-2, on the right side) has five fans also: Fan 01-2 and Fan 02-2 on the front panel; and Fan 03-2, Fan 04-2 and Fan 05-2 on the rear side.



NOTE: "-1" means enclosure 1 and "-2" means enclosure 2.

2.3.1 PSFM Panel

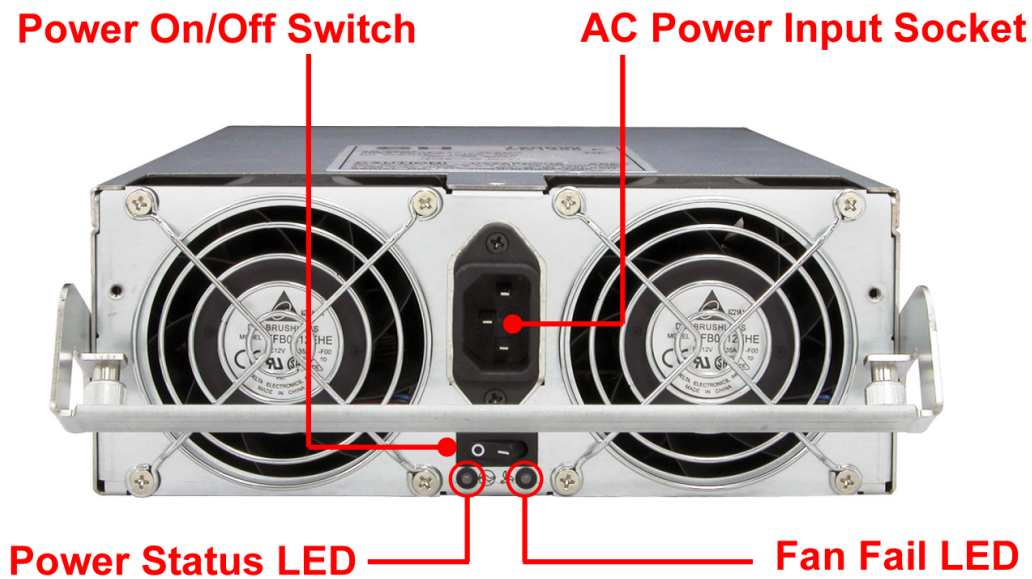

Part	Description
AC Power Input Socket	Use to connect the power cord from power source.
Power On/Off Switch	Use to power on or power off the PSFM.


Indicator	Color	Description
Power Status LED	Green	Indicates the power supply module is good.
	Red	Indicates the power supply module is faulty.
Fan Fail LED	Red	Indicates one or more fans in the PSFM has failed.

When the power cord connected from main power source is inserted to the AC Power Input Socket the Power Status LED becomes **RED**. When the switch of the PSFM is turned on, the LED still shows **RED**. After the main switch in front panel is turned on, the LED turns **GREEN**, which means it is functioning normally.


The PSFM has a **5V standby** DC voltage. When the power cord(s) is/are connected to the AC Power Input Socket, after 1 second, all Activity LEDs will flash once. When the power cord(s) is/are disconnected from AC Power Input Socket, after 3 seconds, all Activity LEDs will flash twice.

2.4 Fan Module

GV-Expansion System V3 64 Bays contains 15 fans.

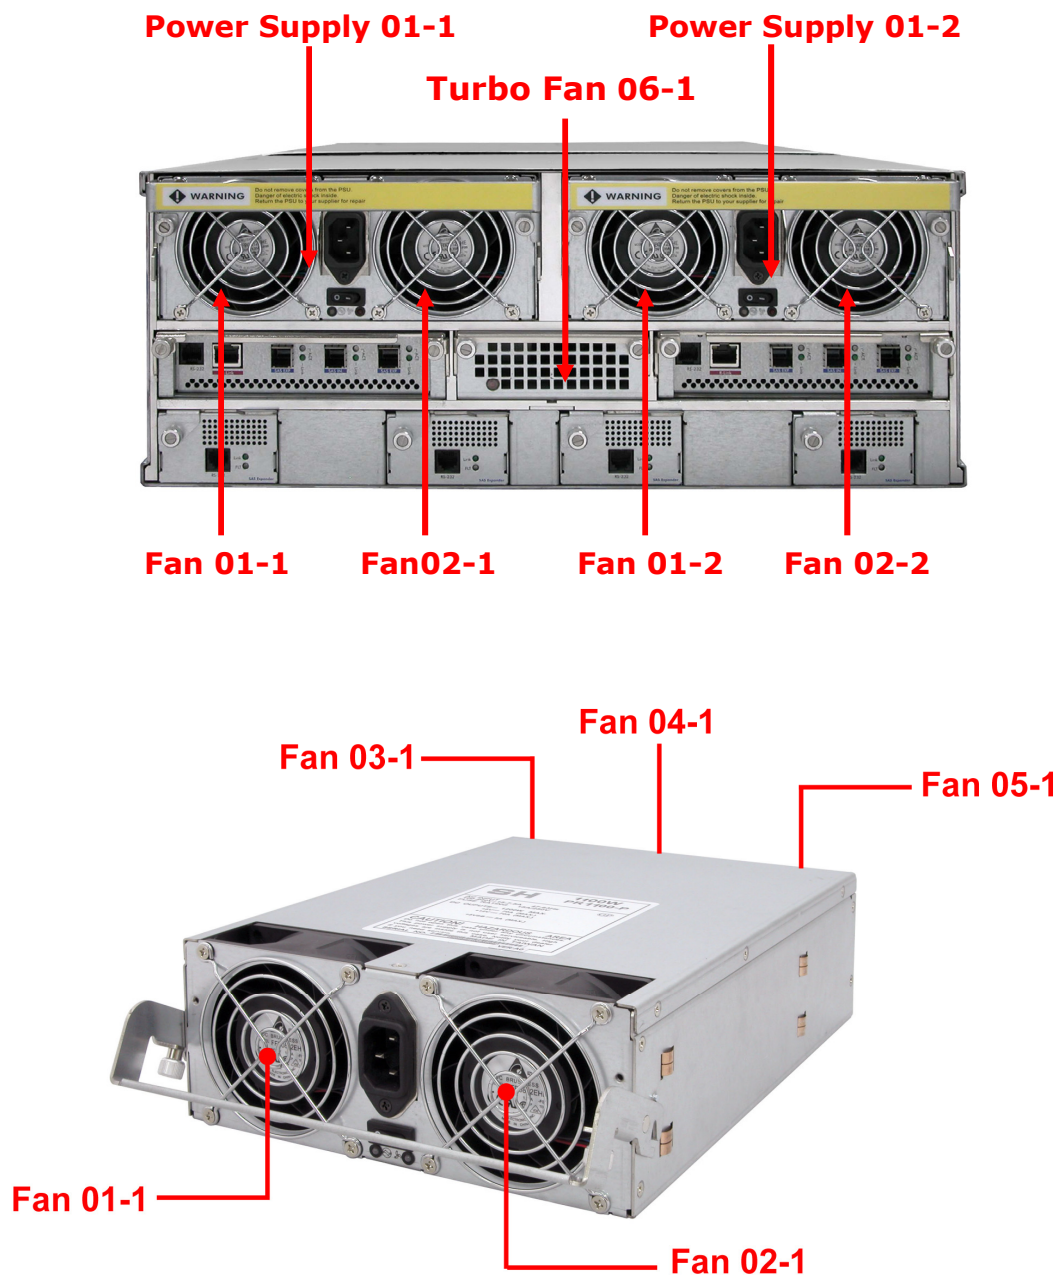

NOTE: "-1" means enclosure 1 and "-2" means enclosure 2.

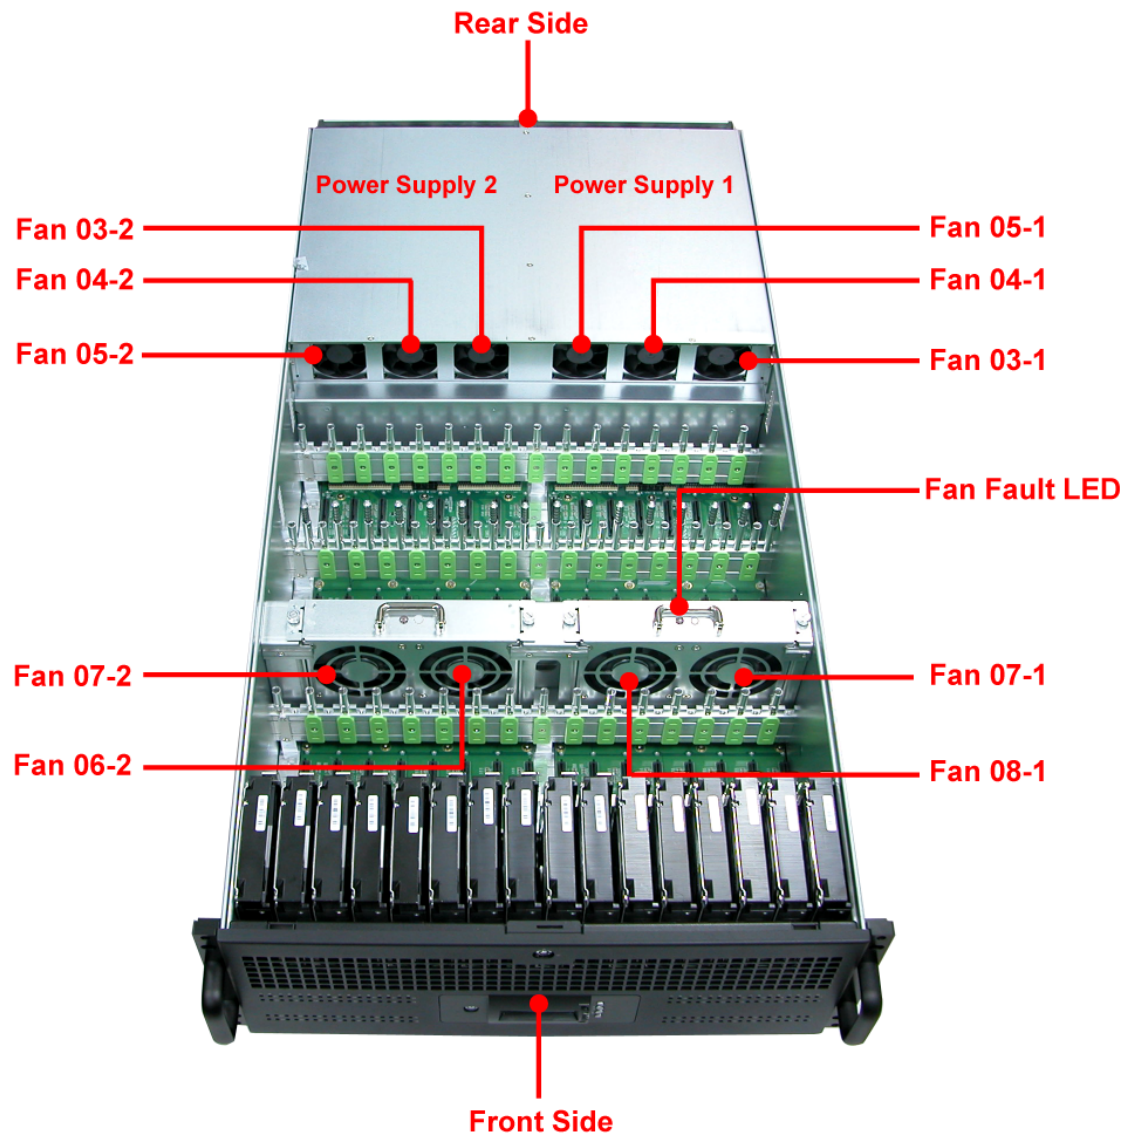


Indicator	Color	Description
Fan Fault LED	No light	Indicates the fan is normal.
	Red	Indicates the turbo fail is faulty.

2.4.1 Turbo Fan

The turbo fan (Fan 06-1) provides additional airflow inside the enclosure.



Turbo Fan LED

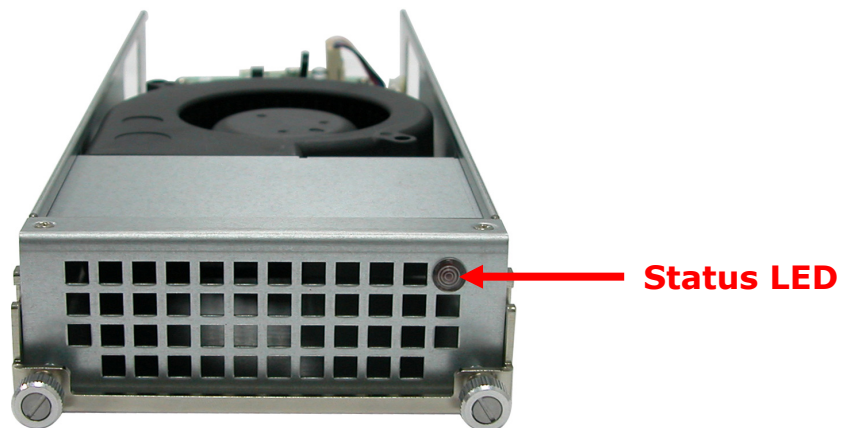

Indicator	Color	Description
Status LED	Red	Indicates the turbo fan is faulty.



NOTE: The status of Turbo Fan (Fan 06-1) is monitored by Expander Module 1.


2.5 Expander Module

The Expander Module contains the SAS expander. It can be used to upgrade the SAS expander firmware. It also contains the SES module (SCSI Enclosure Services). SES is the protocol used for enclosure environmental control.



The SES module monitors the following enclosure conditions: temperature, power supply voltage, and fan speed.

2.5.1 Expander Module Panel

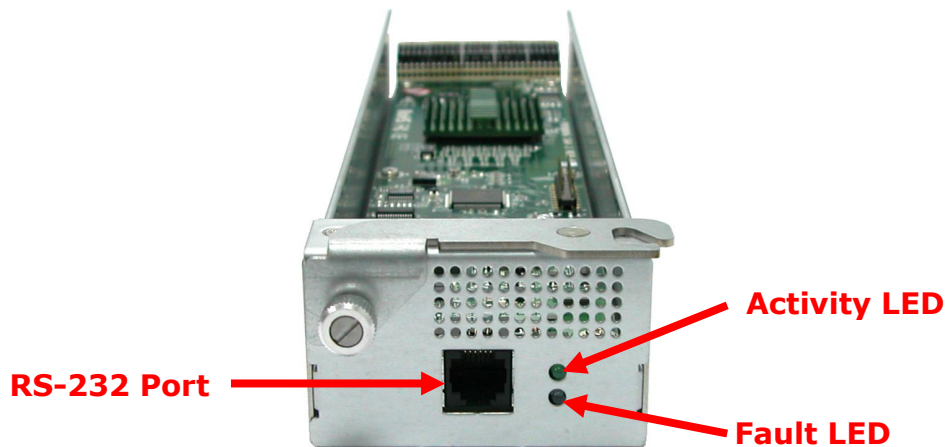

Part	Description
RS-232 Port	Use to upgrade the firmware of the expander module. Connect the serial cable RJ11-to-DB9 to your system's serial port.


Indicator	Color	Description
Activity LED	Blinking Green	Indicates the expander module is busy or active.
Fault LED	Blinking Blue	Indicates the expander module is faulty or has failed.

2.6 Disk Drive Installation into the Disk Slot

This section describes the physical locations of the hard drives supported by GV-Expansion System V3 and give instructions on installing a hard drive.



NOTE: When the Disk Array is shipped, the disk trays are not placed in the disk slots. If all disk trays will be used to install all 64 disk drives, for quicker and easier installation of disk drives in the Disk Array, it is recommended to attach first each disk drive with HDD side brackets.

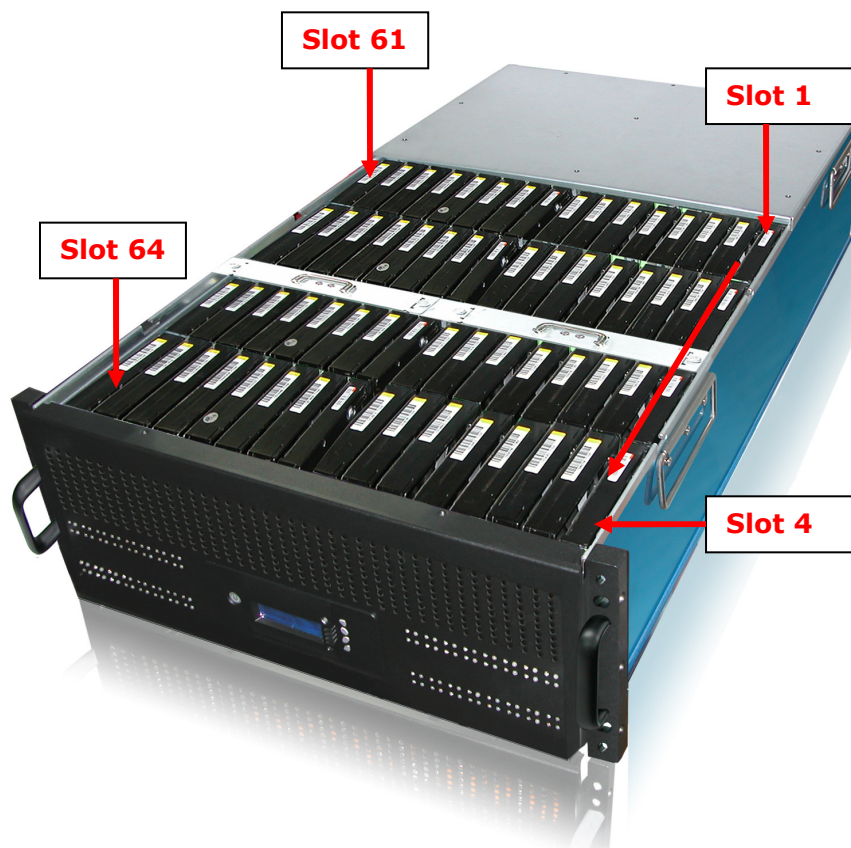

DISK SLOT NUMBERS

Rear side															
61	57	53	49	45	41	37	33	29	25	21	17	13	9	5	1
62	58	54	50	46	42	38	34	30	26	22	18	14	10	6	2
63	59	55	51	47	43	39	35	31	27	23	19	15	11	7	3
64	60	56	52	48	44	40	36	32	28	24	20	16	12	8	4
Front Side															



IMPORTANT: In single controller mode, the installation of SATA disk in a disk tray is the same with SAS disk.


HDD	Single Controller
SATA	No need dongle board
SAS	No need dongle board



NOTE: In this model, it is recommended to use 6Gb hard drive disks.

2.6.1 To install a SAS disk drive or SATA disk drive in a disk tray:


1. Prepare the HDD side brackets. Remove them from the dummy disk by pushing the upper sides of the dummy disk as shown below:

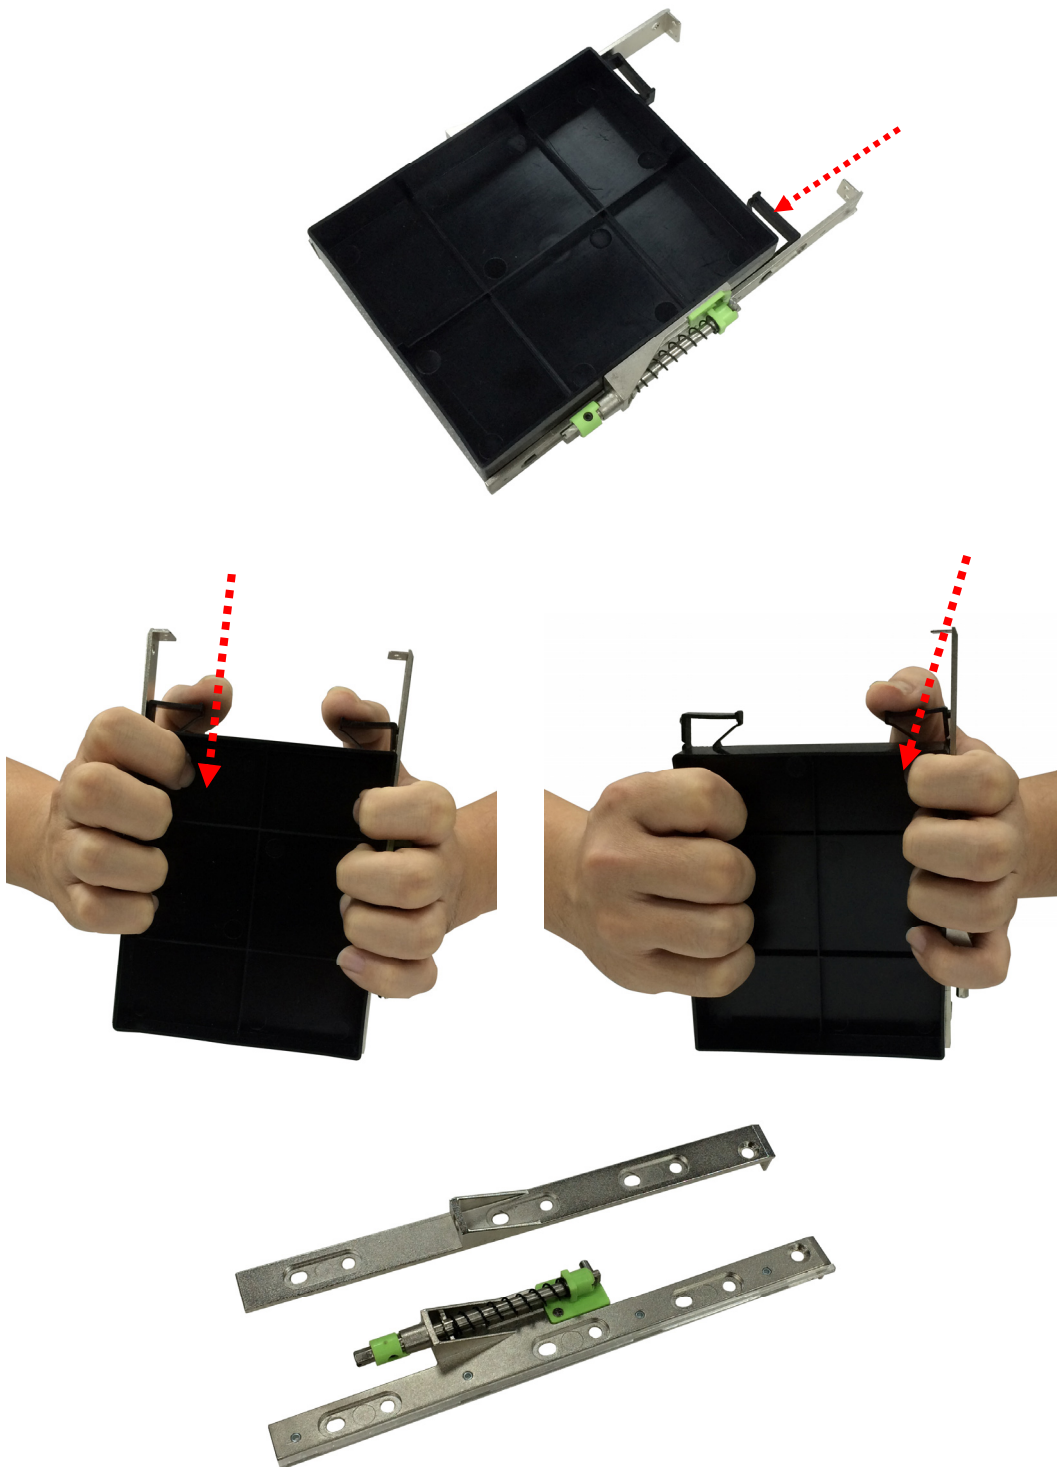

2. Place the brackets on both sides of the disk drive and secure them with screws.



**2 screws
#6-32 UNC L=5.0mm**

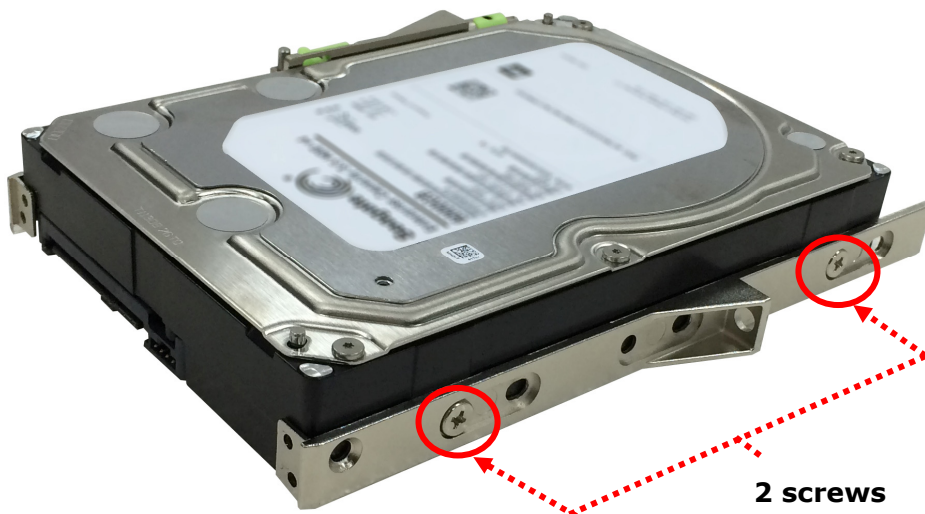

**2 screws
#6-32 UNC L=5.0mm**

2 Identifying Parts of GV-Expansion System V3

3. Place the drive carefully in the disk slot.



4. Fix the disk drive using the disk tool that is included in the package.



Chapter 3 Getting Started with GV-Expansion System V3

3.1 Installing the Rails and Mounting into Rack



NOTE: At least two persons are needed to lift the Disk Array. To reduce the weight of the Disk Array, remove the power supply modules from the rear of Disk Array. If disk drives are already installed in the disk trays, remove also the disk trays. Refer to appropriate sections on how to remove the power supply modules and how to remove the disk trays/disk drives.

NOTE: The sample model used in the following installation might not be the actual model for this manual.


NOTE: The Disk Array must be installed near the Disk Array or host system where it will be connected. A Phillips screwdriver is needed in installation.




WARNING! It is prohibited to put other enclosures on top of the 64-bay Disk Array because the total weight will not be supported by the rails.

Steps:

1. Open the rail box.
2. Remove the 2 rail assemblies and the screws/accessories from the box. Check its contents.

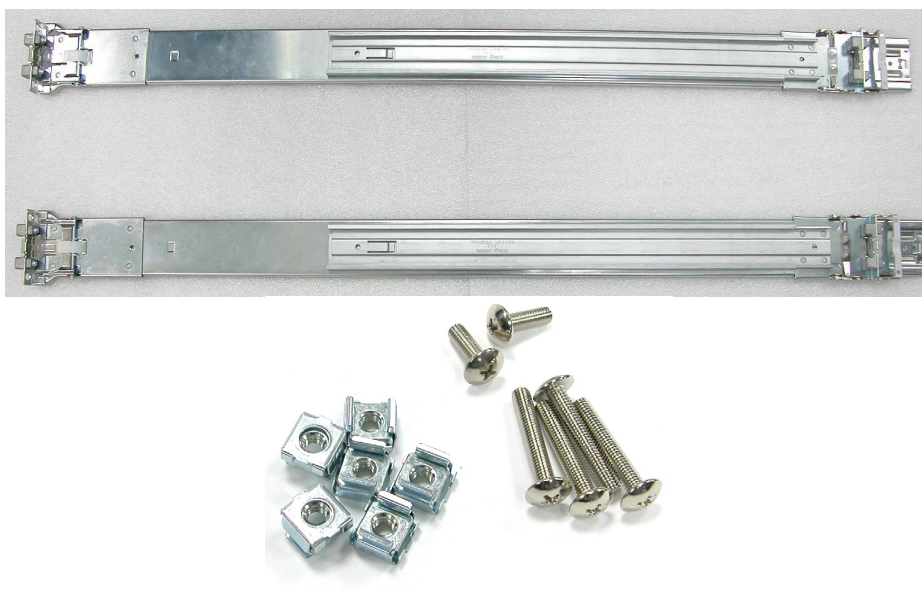


3. Insert three (3) M5 nuts on the 2 holes of the front left side of the rack post.

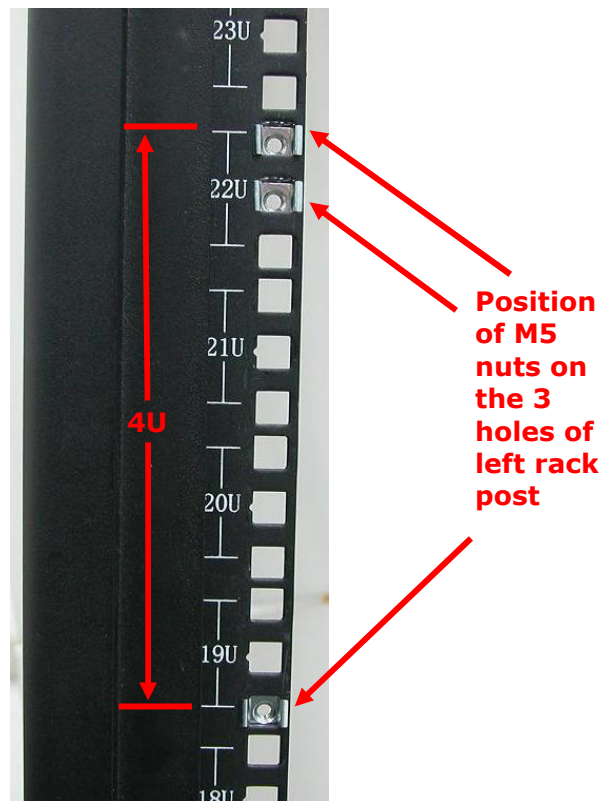


Rack Post – Front Left Side

4. Insert three (3) M5 nuts on the 2 holes of the front right side of the rack post.

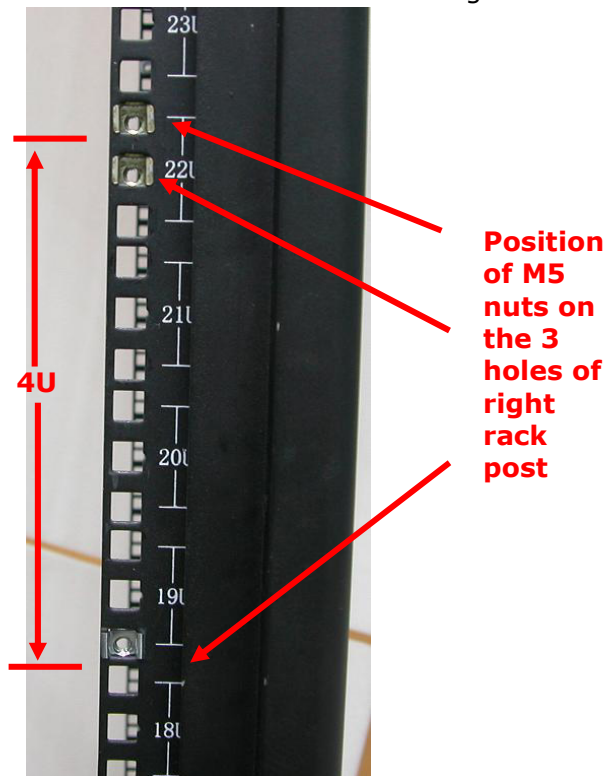

Rack Post – Front Right Side


5. Prepare the 2 rail assemblies.

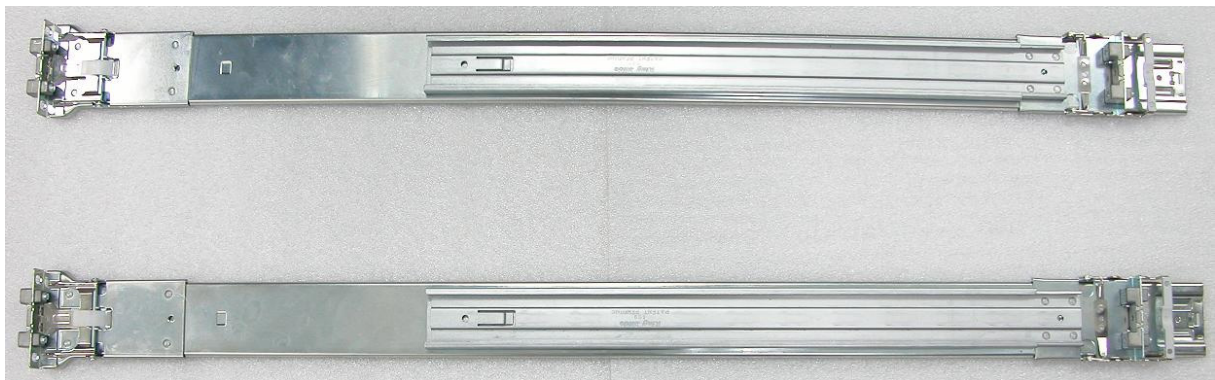


Front Side of Rail Assembly

Rear Side of Rail Assembly


6. Hold one rail assembly and install in the front left side of rack. To install, align and insert the 2 latches of the rail into the 2 holes on the rack post. Use the Lock Lever to lock the rail assembly in the left rack post.

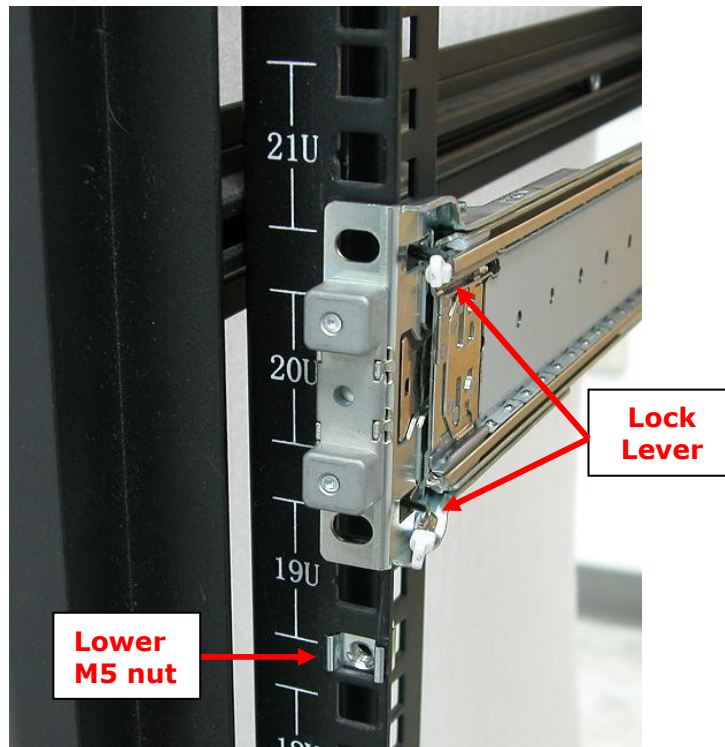

**View from Front Side of Front Left Rack Post
Lock Lever is Not Locked**

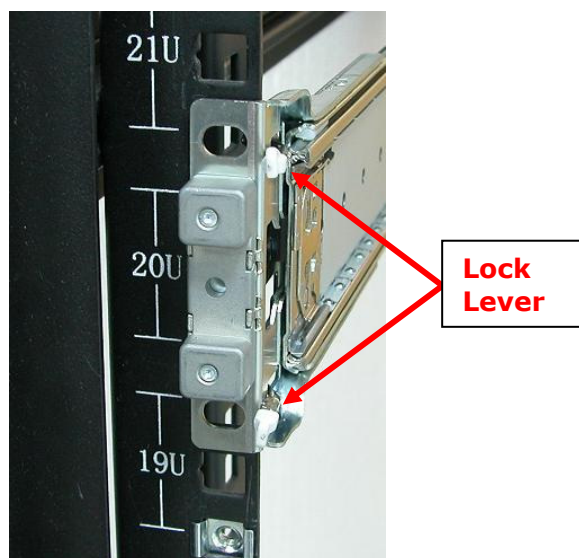


**View from Front Side of Front Left Rack Post
Lock Lever is Locked**

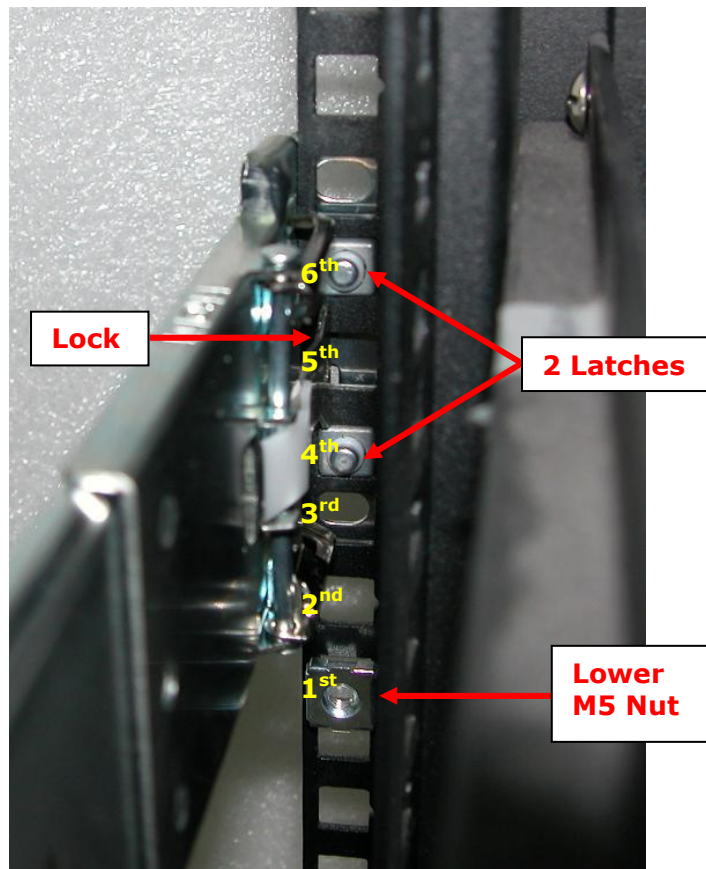


View from Rear Side of Front Left Rack Post
2 Latches are inserted in the 4th and 6th holes from bottom (M5 nut)


7. Install the other end of rail assembly to the left rear side. Align and insert the 2 latches on the 2 holes on the rear rack post, and then push the rail a little towards the rear side and lock the lock lever on the rack post.

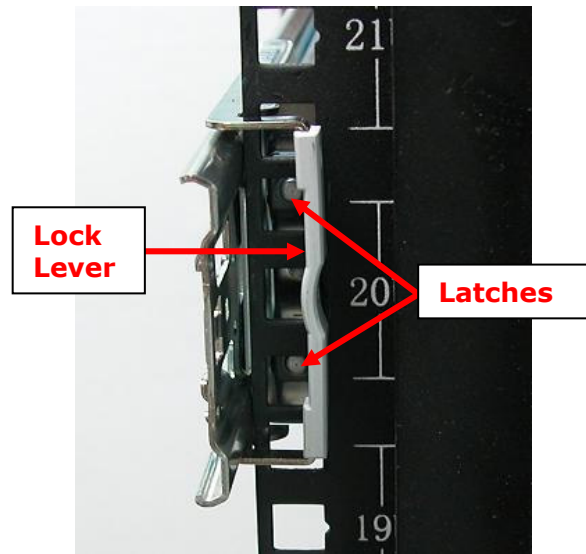

View from Rear Side of Rear Left Rack Post

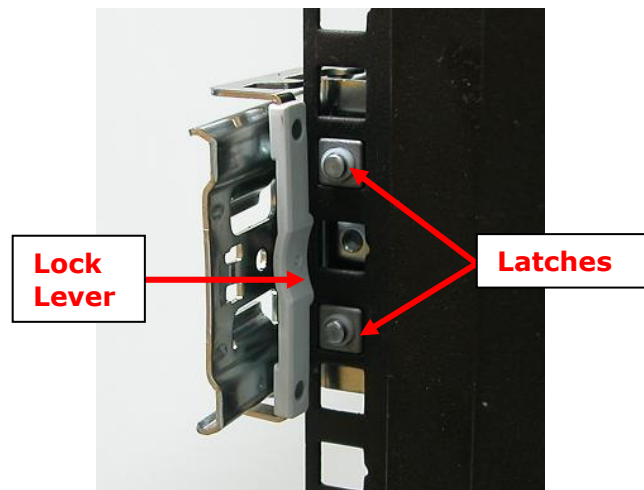


View from Rear Side of Rear Left Rack Post

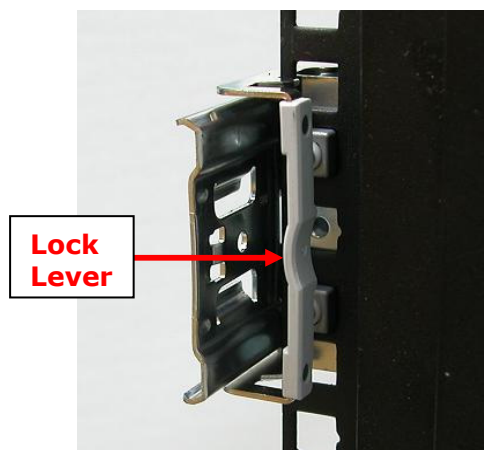


View from Rear Side of Rear Left Rack Post


8. Repeat step 6 to install the other rail assembly into the right front side.

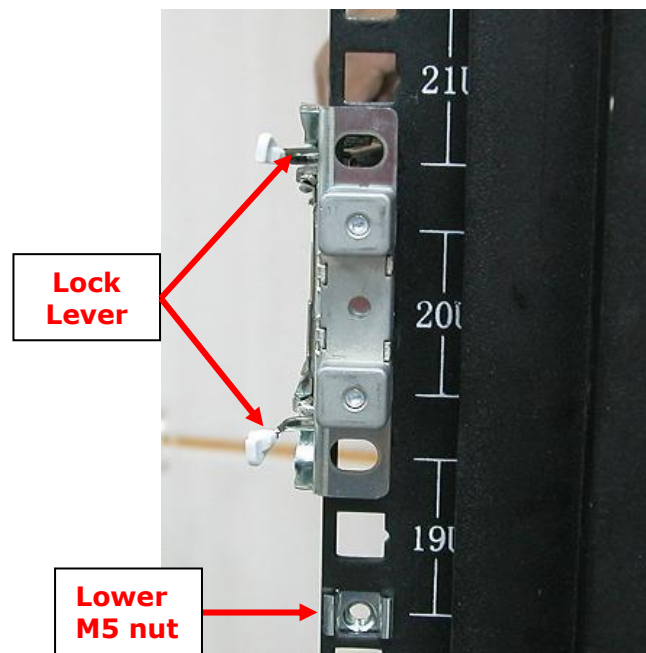

**View from Front Side of Front Right Rack Post
Lock Lever is Not Locked**

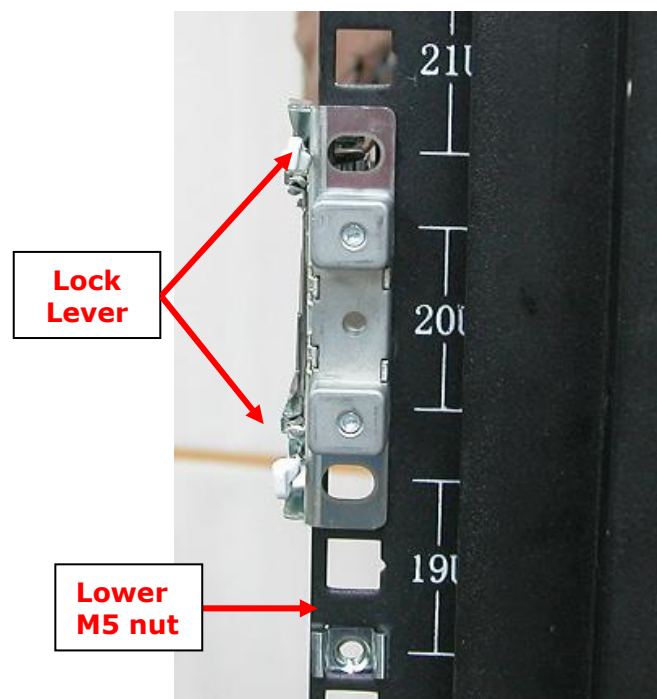


**View from Front Side of Front Right Rack Post
Lock Lever is Locked**

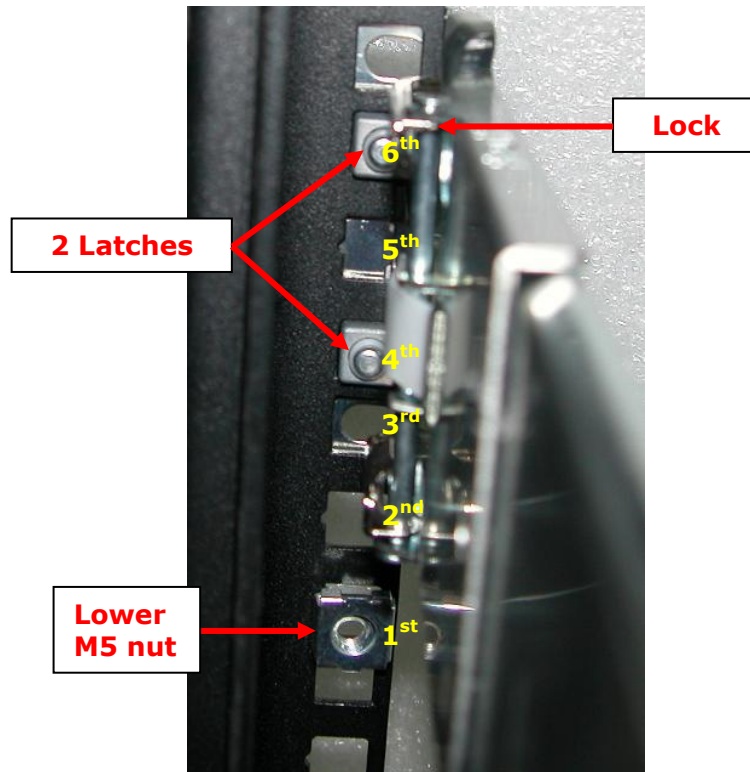


View from Rear Side of Front Right Rack Post
2 Latches are inserted in the 4th and 6th holes from bottom (M5 nut)


9. Repeat step 7 to install the other end of rail assembly to the rack post of rear right side.

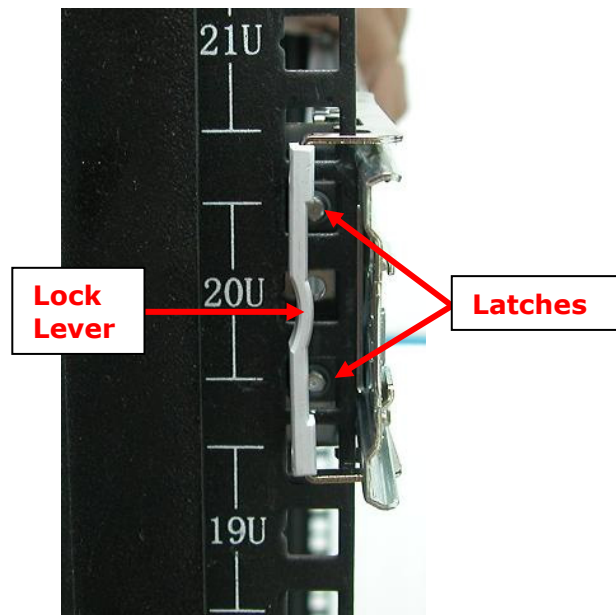

View from Rear Side of Rear Right Rack Post

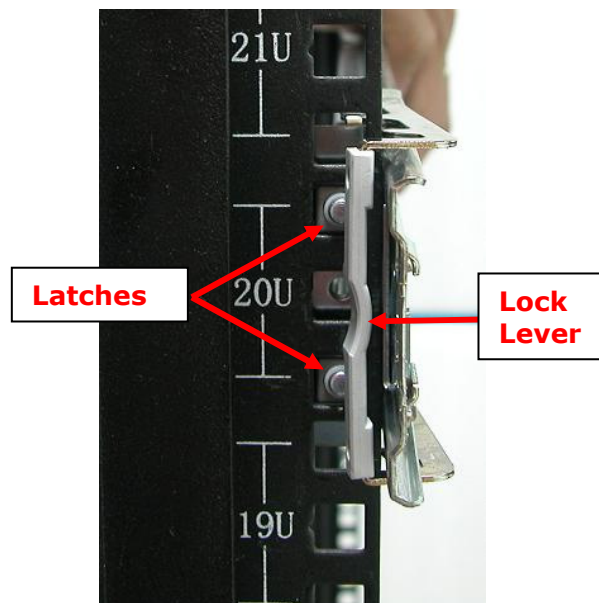


View from Rear Side of Rear Right Rack Post

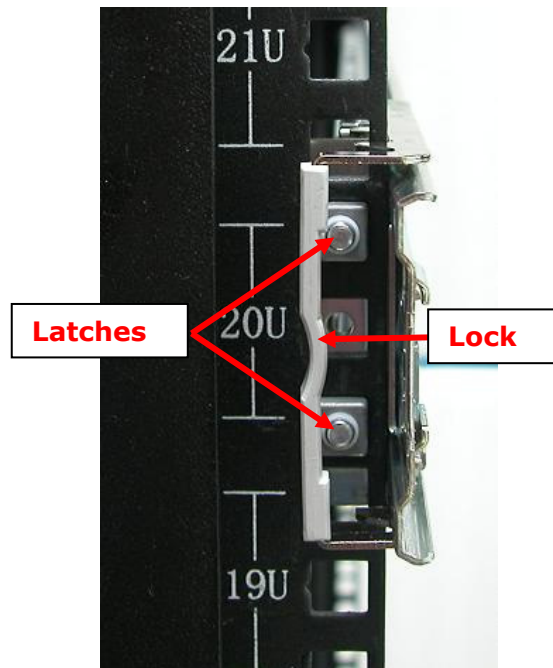


View from Rear Side of Rear Right Rack Post

10. Pull the 2 middle rail members out from the rail assembly.

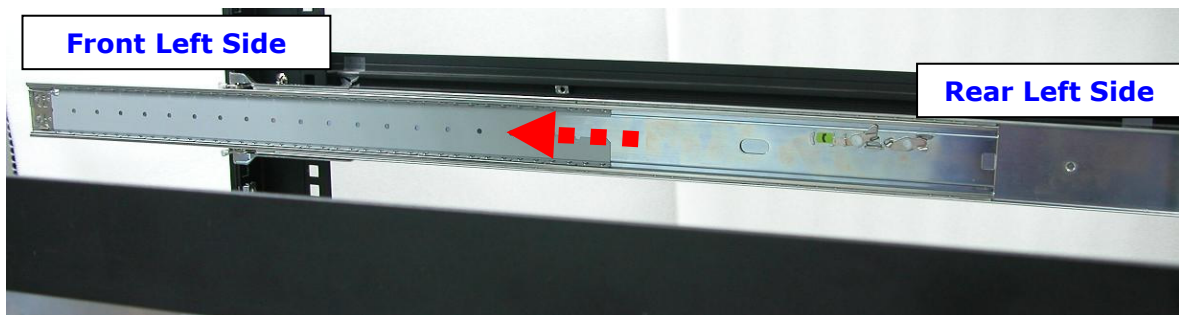


Middle Rail Member of Rail Assembly on Left Side of Rack

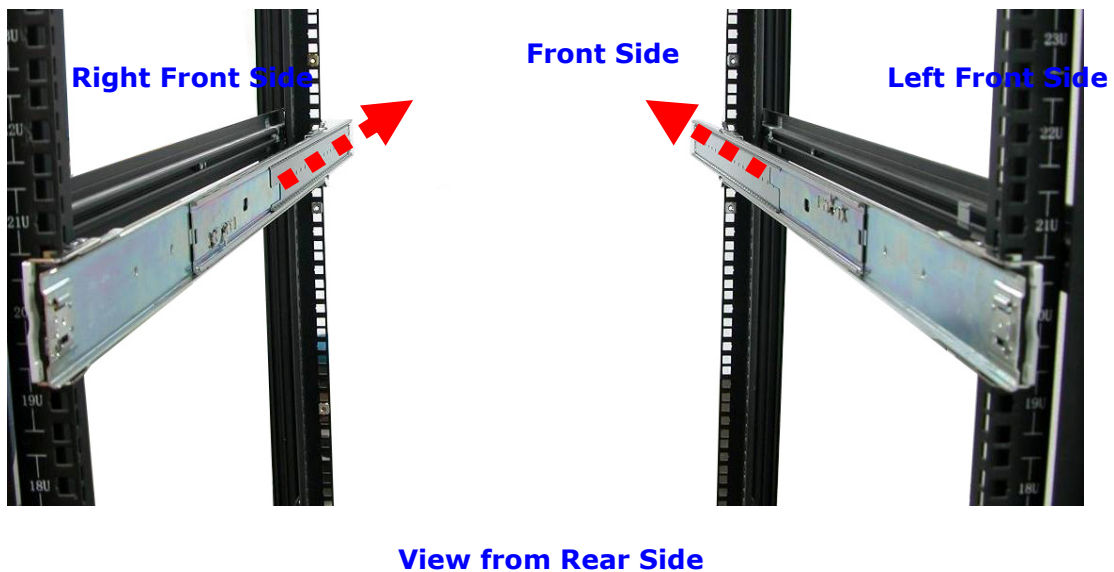

11. With at least 4 persons carrying the enclosure, insert the 2 inner rails (attached to the sides of the enclosure) into the middle rails. Slide the enclosure until it stops or about half way through.




NOTE: Be careful when inserting the 2 inner rails into the middle rails. The 2 inner rails must be parallel with the 2 middle rails so that 2 inner rails will insert and slide easily. Use hands to guide the inner rails when inserted into the middle rails.

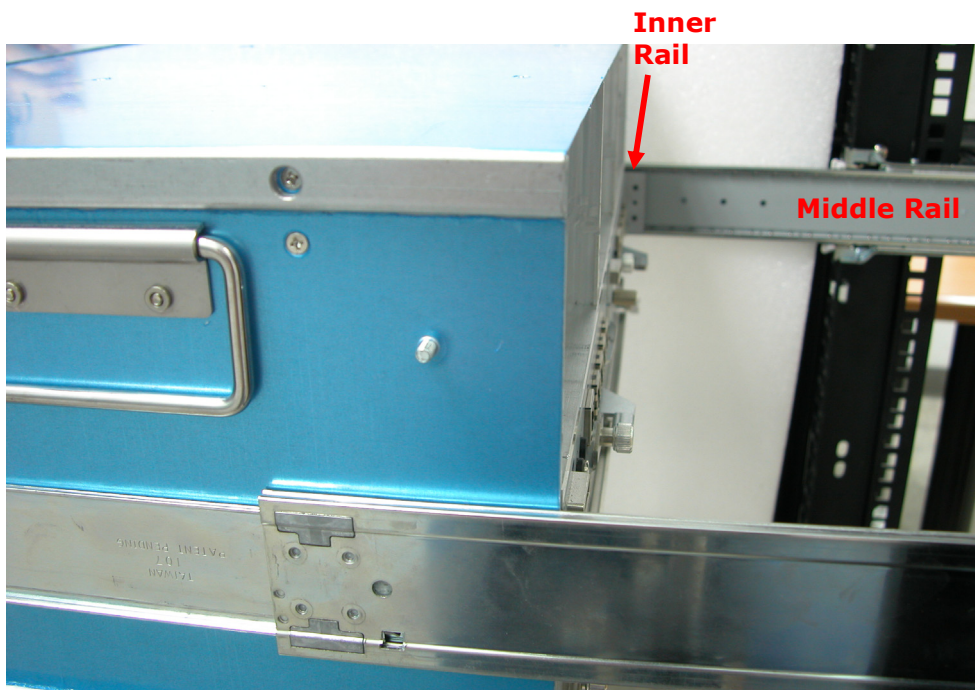

Inner Rail Aligned with and Inserted into the Middle Rail




Important: Make sure to hold the enclosure firmly in level position while inserting the enclosure in the rail. Keep holding the enclosure moved inside the rack. When the half rear side is inside the rack, you can put down the two rear handles but support in the bottom part of the enclosure is still needed so that the enclosure will not drop down.

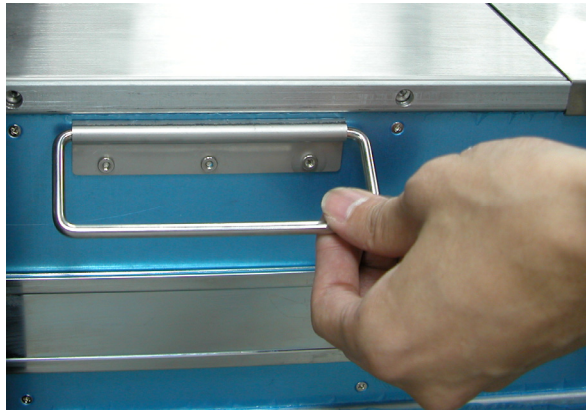

View from Rear Side

12. Press outwards the blue locks on both sides of the inner rail members at the same time. Then push the enclosure inwards (or backwards) until it goes inside the rack.

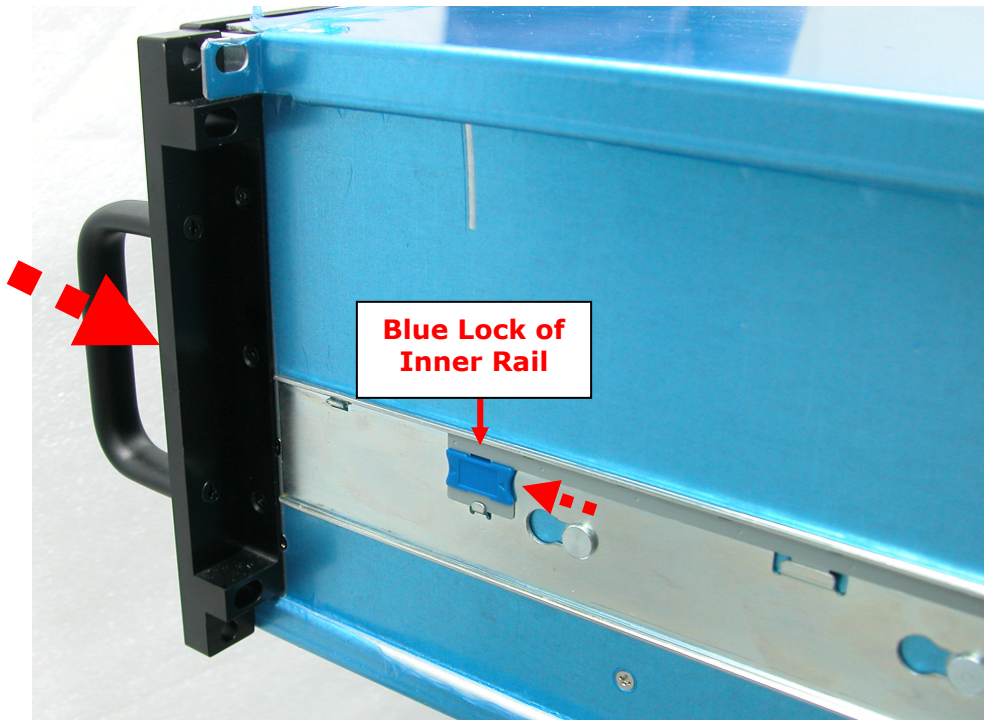

View from Right Side of Enclosure
Blue Lock of Inner Rail is Pushed a Little Outwards and
Enclosure is Pushed Inwards




View from Rear Side of Rack Cabinet
Enclosure is Pushed Inwards


13. Insert the power supply modules.



14. Use six (6) M5 screws to lock the enclosure into the rack post, one screw in each corner. Note that the screw driver will need to pass through the corner hole of front panel for the two upper corner holes on both sides.

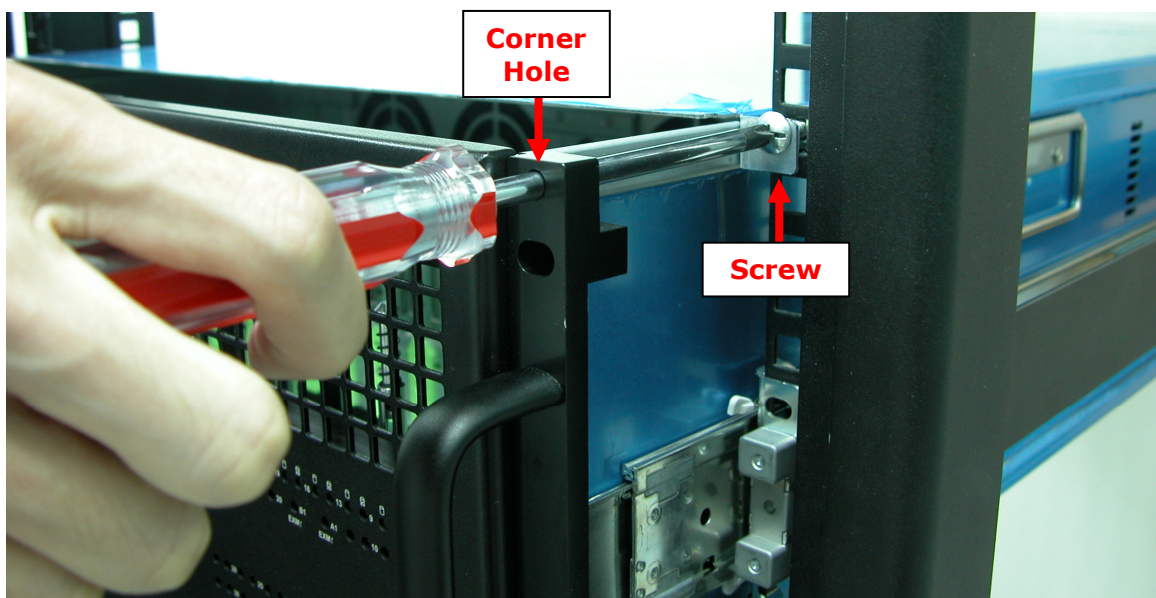

Front Left Side

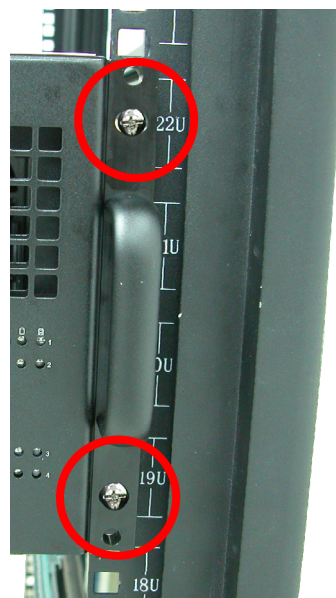

Front Right Side


15. Open the top cover and re-insert the disk drives / disk trays, if disk drives/disk trays were previously removed. Then close the top cover.

3.2 Removing the Disk Array from the Rack

1. Remove the six screws in the front corner.



Front Left Side

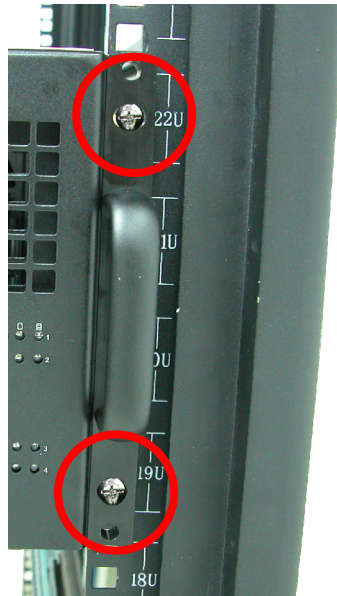

Front Right Side


2. Remove the power supplies in the rear and the disk drives from the disk slots.



3. Carefully pull GV-Expansion System V3



4. Push the white lock to release GV-Expansion System V3 from the rail.

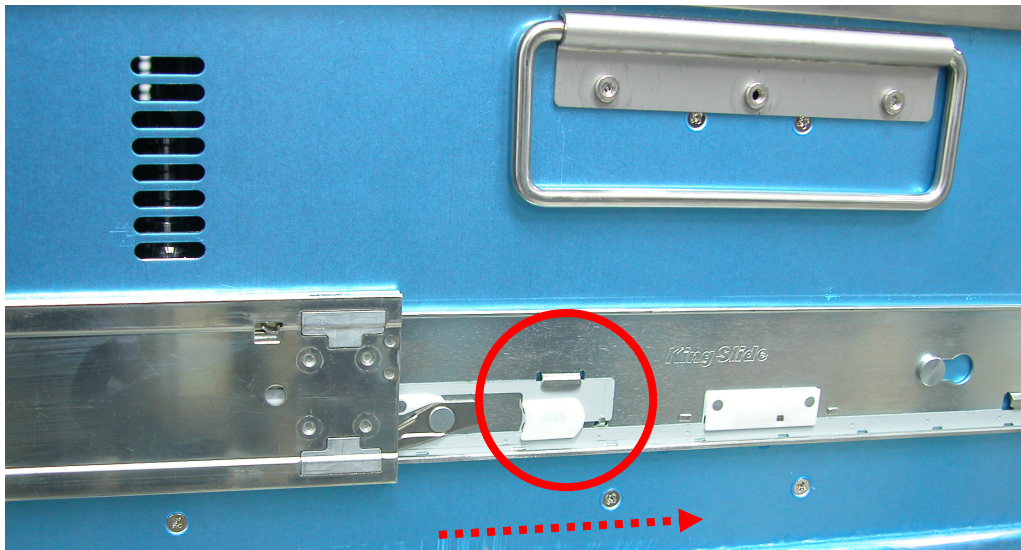

3.3 Preparing the JBOD and Connecting to GV-Expansion System V3 64 Bays

1. Install the disk drives, if not yet installed. Refer to Section 2.6 Disk Drive Installation for detailed information.
2. Connect one end of SAS cable to the **SAS In Port** of GV-Expansion System V3 enclosure and the other end to the **SAS Expansion Port** of GV-Expansion System V3 enclosure.

3.4 Preparing the JBOD and Connecting to SAS HBA in Host System

1. Install the disk drives, if not yet installed. Refer to Section 2.6 Disk Drive Installation for detailed information.
2. Connect one end of SAS cable to the **SAS In Port** of GV-Expansion System V3 enclosure and the other end to the SAS HBA on the Host system.

3.5 Powering On

1. Plug in all the power cords into the AC Power Input Socket located at the PSFM.



NOTE: GV-Expansion System V3 64 Bays is equipped with redundant, full range power supplies with PFC (power factor correction). The system will automatically select voltage.




NOTE: The PSFM has a 5V standby DC voltage. When the power cord(s) is/are connected to the AC Power Input Socket, after 1 second, all Activity LEDs will flash once. When the power cord(s) is/are disconnected from AC Power Input Socket, after 3 seconds, all Activity LEDs will flash twice.

2. Turn on each Power On/Off Switch of the PSFM. The main switch button in the front panel will still flashing blue.



NOTE: When the power cord connected from main power source is inserted to the AC Power Input Socket, the Power Status LED becomes **RED**. When the switch of the PSFM is turned on, the LED still shows **RED**. After the main switch in front panel is turned on, the LED turns **GREEN**, which means it is functioning normally.

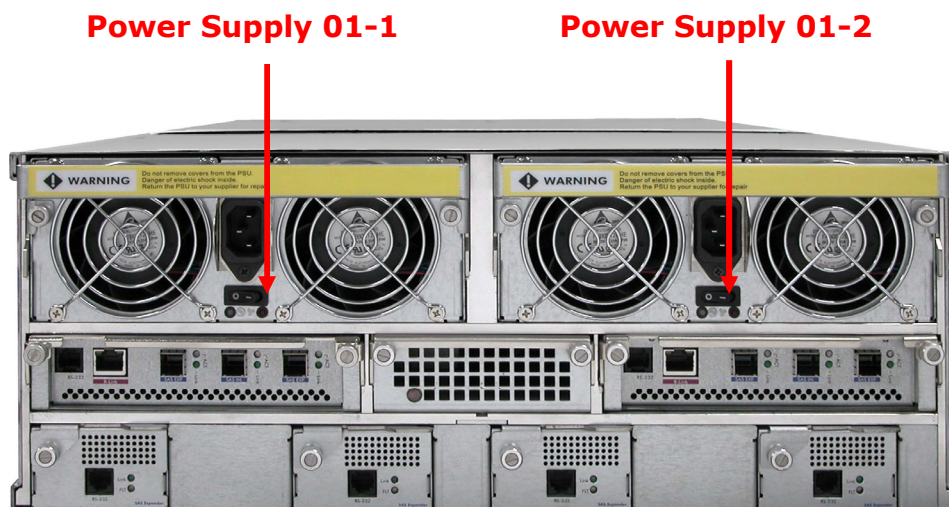

3. Push the main switch button in the front panel to power on.



4. Allow the machine a few moments to initialize before using it. The main switch button will continue flashing blue until the system is finished checking each disk slot.



NOTE: The system will initialize after turning on the Main Switch. Each disk slot will be checked during system initialization.

5. Configure GV-Expansion System V3 using the utility options described in the next chapter.

3.6 Powering Off



IMPORTANT: When powering off GV-Expansion System V3, turn off first the Main Switch in the front panel and allow at least 3 minutes for GV-Expansion System V3 to shutdown properly. During this time, each disk slot starting from slot #1 until slot #64 will be powered down. The main switch button in the front panel will flash blue.

When GV-Expansion System V3 has totally powered down, turn off the switches of the 2 Power Supply Fan Modules at the rear. The main switch button in the front panel will still flash blue until the power cords are pulled out from the sockets.


Chapter 4 Maintenance

4.1 Upgrading the JBOD Controller Firmware



NOTE: The JBOD firmware upgrade procedure must be done three times. First is on the JBOD Controller, next is on the Expander Module 1-1, then last on the Expander Module 1-2.

NOTE: There must be no I/O in the disk drives in GV-Expansion System V3 (RAID volumes should not be accessed) during firmware upgrade.

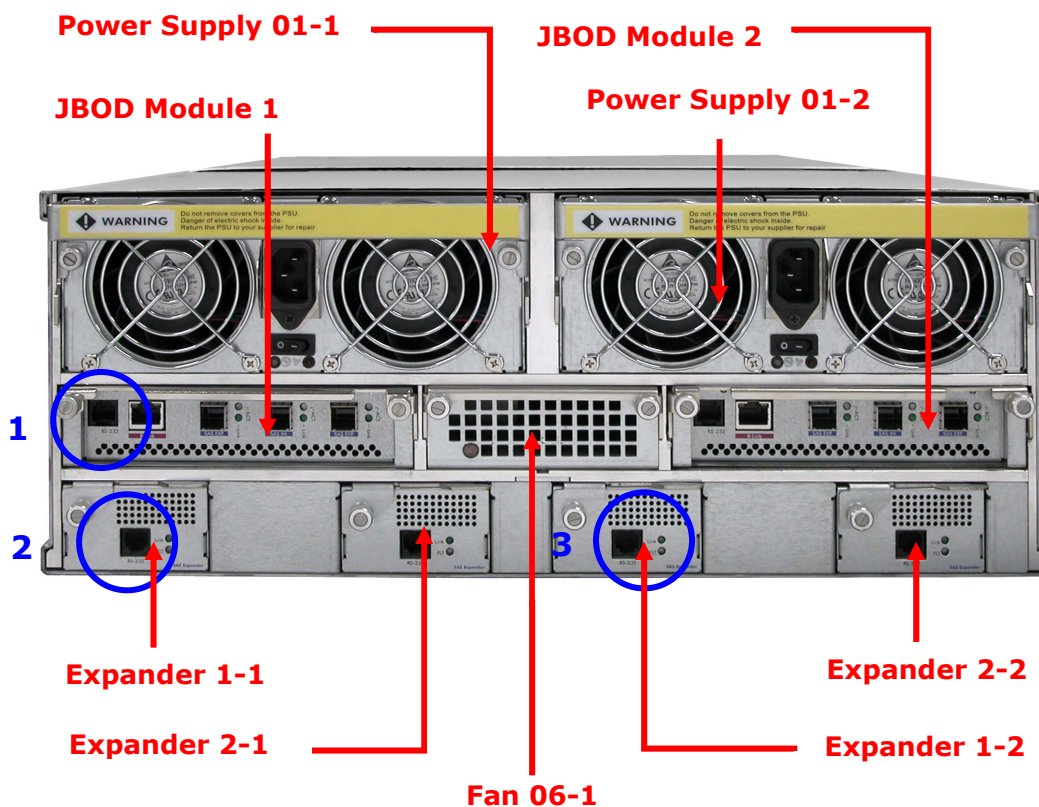

NOTE: It is important to stop I/O access to GV-Expansion System V3 during firmware upgrade.

NOTE: Upgrading the firmware must be done from Master JBOD Controller if GV-Expansion System V3 has redundant JBOD Controllers.

1. Please use the RS232 cable (RJ11 to DB9) to JBOD Controller #1 and to connect JBOD RS232 Port and PC COM1 Port (or change to other COM Port as necessary).
2. Open Windows HyperTerminal Program. Connect using COM1 (COM Port used in Step1), Baud Rate: 115200, n, 8, 1, Flow Control: None.
3. Press the Enter key and the password prompt will be displayed.
4. Key in the password (Default password: 00000000) to login to CLI.
5. At CLI prompt, input the command to update firmware.

a. **CLI> mo**

Operation Mode: Master, CLI Dual, M.Sensor, I2C

Operation Mode: Backup

Operation Mode: Single

NOTE:

If Operation Mode is "Master, CLI Dual, M.Sensor, I2C", it means you are connected to Master Expander and you can continue with next steps.

If Operation Mode is "Backup", it means you are connected to Backup Expander. Remove RS232 serial cable and insert to other JBOD RS232 Port.

If Operation Mode is "Single", it means this GV-Expansion System V3 has only one controller, please skip to step D.

b. **CLI> mo fdl both**

c. **CLI> mo**

Operation Mode: Master, CLI Dual, M.Sensor, I2C, fdl both

d. **CLI>**

NOTE:

"fdl code" is the command to update flash firmware code (.fw file).

**"fdl mfgb" is the command to update CFG data code (.rom file)
Make sure you have both files before updating.**

e. **CLI> fdl mfgb**

Please Use XModem Protocol for File Transmission.

Use Q or q to quit Download before starting XModem.

- f. Select Function menu to transfer CFG data .rom file: "Function" → "Transfer" → "Send File" → "Browse" → "Open" and select the .rom file (for example: **8018-mfgdat12-20140822.rom**) firmware folder location. Select "Xmodem" Protocol to send firmware file (**Only need about 60 seconds to finish sending firmware file. If not, please repeat steps E again**).

Note. If won't to transfer CFG data .rom file, Press Q or q to quit Download before starting data transfer.

- g. **CLI>fdl code**

Please Use XModem Protocol for File Transmission.

Use Q or q to quit Download before starting XModem.

- h. Select Functon menu to transfer firmware file: "Function" → "Transfer" → "Send File" → "Browse" → "Open" and select the .fw file (for example: **8018-03.B0.00.1F-20140822.fw**) from firmware folder location. Select "Xmodem" Protocol to send firmware file (**Only need about 60 seconds to finish sending firmware file. If not, please repeat steps G again**).

Note. If won't to transfer firmware data .fw file, Press Q or q to quit Download before starting data transfer.

- i. Use "reset" command to Restart JBOD or power cycle
- j. Re-login to JBOD CLI.
- k. Use "sys" command to verify JBOD firmware version.

CLI>sys

- l. If needed, the "reset" command can also be used to restart the JBOD controller. (Normally used in single JBOD Controller mode, If already to connect to Controller)

CLI>reset