

AL400ULX Series Power Supply/Charger

Installation Guide

Models Include:

- AL400ULX
 - Single Output
- AL400ULPD4
 - Four (4) Fused Outputs
- AL400ULPD8
 - Eight (8) Fused Outputs
- AL400ULXPD16
 - Sixteen (16) Fused Outputs

- AL400ULPD4CB
 - Four (4) PTC Outputs
- AL400ULPD8CB
 - Eight (8) PTC Outputs
- AL400ULXPD16CB
 - Sixteen (16) PTC Outputs

For a red enclosure add an "R" suffix to the part # e.g. AL400ULPD8R

Overview:

The AL400ULX is a power supply that converts a 115VAC / 60Hz input to a 12VDC or 24VDC regulating output (see specifications below). The AL400ULX is the base power supply unit for the UL Listed multi-output power supply/charger series: AL400ULPD4, AL400ULPD4CB, AL400ULPD8, AL400ULPD8CB, AL400ULXPD16, AL400ULXPD16CB (Refer to *AL400ULX Series Power Supply Configuration Reference Chart* below).

AL400ULX Series Power Supply Configuration Reference Chart:

								1			
Altronix Model Number	Accessory Power Distribution Module(s)	Number of Outputs	Fused Outputs	PTC Outputs (auto-resettable)	12VDC Total Output Current (A)	24VDC Total Output Current (A)	Individual Ouput Rating (A)	Power Supply Input Fuse Rating	Power Supply Ouitput Fuse Rating	Agency Listings	UL Listings and File Numbers
AL400ULX AL400ULXX AL400ULXR	_	1	_	_	4	3	_	5A/ 250V	15A/ 32V	BSECU C UL U 9B98 MEA NYC Dept. of Approved Buildings California State Fire Marshal Factory Maryand Mutual Approved	UL File # S4707 UL 294 UL Listed for Access Control System Units. UL 603 UL Listed Standard for Power Supplies for Use with Burglar-Alarm Systems.
AL400ULPD4 AL400ULPD4CB	PD4ULCB	4	✓	- ✓			3.5	5A/ 250V	15A/ 32V		UL 1069 UL Listed Hospital Signaling
AL400ULPD8	PD8UL		✓	_			3.5	5A/	15A/	SECU (UL)	and Nurse Call Equipment. UL 1481 UL Listed Standard for Safety
AL400ULPD8CB	PD8ULCB	8	_	✓	4	3	2.5	250V	32V	CUL LISTED 9B98 9B98	for Fire Protective Signaling Systems.
AL400ULXPD16	Two (2) PD8UL	16	✓	_			3.5	5A/	15A/		"Signal Equipment" Evaluated to
AL400ULXPD16CB	Two (2) PD8ULCB	10	_	✓			2.5	250V	32V		CSA Standard C22.2 No.205-M1983

Do not exceed total output rating of 4A @ 12VDC or 3A @ 24VDC per unit.

Specifications:

Input:

- Input 115VAC / 60Hz, 3.5A.
- AC input and DC output LED indicators.

Output:

- Class 2 Rated power-limited output(s).
- 12VDC or 24VDC selectable output. Burglar Alarm Applications (UL 603): 12VDC = 10VDC-13.2VDC. 24VDC = 20VDC-26.4VDC.
- 4A total supply current at 12VDC or 3A total supply current at 24VDC.
- Filtered and electronically regulated outputs.
- Short circuit and thermal overload protection.
- Output fuse rated at 15A/32V.

Power Supply Output Specifications:

Output	Switch Position			
12VDC	SW1 - ON (Fig. 1c)			
24VDC	SW1 - OFF (Fig. 1c)			

Battery Backup:

- Built-in charger for sealed lead acid or gel type batteries.
- Automatic switch over to stand-by battery when AC fails.
- Maximum charge current 0.7A.
- Zero voltage drop when switched over to battery backup.

Supervision:

- AC fail supervision (form "C" contacts).
- Low battery and battery presence supervision (form "C" contacts).

Additional Features:

- Power supply, enclosure, cam lock and battery leads.
- All models are available in red enclosure (add an "R" suffix to the part #, e.g. AL400ULPD8R).

- 2 - AL400ULX series

Stand-by Specifications (total current shown):


Output	4 hr. of Stand-by and 5 Minutes of Alarm	24 hr. of Stand-by and 5 Minutes of Alarm	60 hr. of Stand-by and 5 Minutes of Alarm	
12VDC / 40AH Battery	Stand-by = 4.0A $Alarm = 4.0A$	Stand-by = 1.0A $Alarm = 4.0A$	Stand-by = 300mA $Alarm = 4.0A$	
24VDC / 12AH Battery	_	Stand-by = 200mA $Alarm = 3.0A$		
24VDC / 40AH Battery	Stand-by = 3.0A $Alarm = 3.0A$	Stand-by = 1.0A $Alarm = 3.0A$	Stand-by = 300mA $Alarm = 3.0A$	

Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/NFPA 72/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Mount unit in the desired location. Mark and predrill holes in the wall to line up with the top two keyholes in the enclosure. Install two upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two upper screws; level and secure. Mark the position of the lower two holes. Remove the enclosure. Drill the lower holes and install two fasteners. Place the enclosure's upper keyholes over the two upper screws. Install the two lower screws and make sure to tighten all screws (*Enclosure Dimensions*, pg. 7-8).

Fig. 1 CAUTION: De-energize unit prior to servicing. For continued protection against risk of electric shock and fire hazard replace fuse with the same type and rating. Do not expose to rain or moisture.

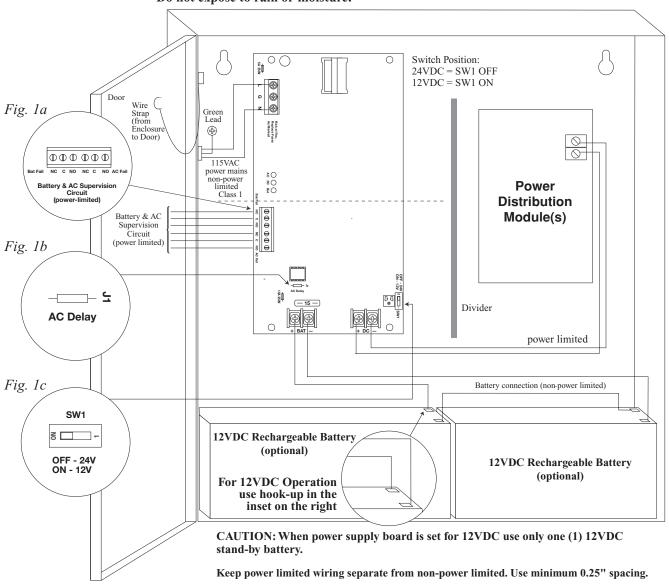

AL400ULX series - 3 -

Installation Instructions (cont'd):

2. The power supply is pre-wired to the ground (chassis). Connect main incoming ground to the provided green grounding conductor lead. Connect unswitched AC power (115VAC / 60Hz) to the terminals marked [L, N] (Fig. 1, pg. 3). Use 14 AWG or larger for all power connections (Battery, DC output, AC input). Use 22 AWG to 18 AWG for power-limited circuits (AC Fail/Low Battery reporting).

Keep power-limited wiring separate from non power-limited wiring (115VAC / 60Hz Input, Battery Wires). Minimum 0.25" spacing must be provided.

CAUTION: Do not touch exposed metal parts. Shut branch circuit power before installing or servicing equipment. There are no user serviceable parts inside. Refer installation and servicing to qualified service personnel.

For Fire Alarm applications the outputs are "Special Applications" only, see list (refer to Appendix A, pg. 6). For other devices contact Underwriters Laboratories to ensure compatibility.

- 3. Set the unit to the desired DC output voltage by setting SW1 (Fig. 1c, pg. 3) to the appropriate position (Power Supply Voltage Output Specifications Chart, pg. 2).
- 4. Measure output voltage before connecting any devices to ensure proper operation. Improper or high voltage will damage these devices. When servicing the unit, AC mains should be removed.
- 5. Connect devices to be powered:
 - a. For AL400ULX Power Supply: connect devices to the terminals marked [- DC +] (Fig. 1, pg. 3).
 - b. For other Power Distribution Models: connect devices to be powered to the terminal pairs 1 to 4 marked [1P & 1N] through [4P & 4N] (*Fig. 2a & 2b, pg. 5*) or 1 to 8 marked [1P & 1N] through [8P & 8N] (*Fig. 3a & 3b, pg. 5*), carefully observing correct polarity.
- 6. For Access Control applications batteries are optional. When batteries are not used, a loss of AC will result in the loss of output voltage. When the use of stand-by batteries is desired, they must be lead acid or gel type.
- 7. Connect appropriate signaling notification devices to AC FAIL & BAT FAIL (Fig. 1a, pg. 3) supervisory relay outputs.
 - **Note:** When used in fire alarm, burglar alarm or access control applications, "AC Fail" relay should be utilized to visually indicate that AC power is on. To delay report for 6 hours cut "AC Delay" jumper (Fig. 1b, pg. 3).
- 8. Please ensure that the cover is secured with the provided Key Lock.

Wiring:

Use 14 AWG or larger for all power connections.

Note: Take care to keep power-limited circuits separate from non power-limited wiring (115VAC, Battery).

Maintenance:

Unit should be tested at least once a year for the proper operation as follows:

Output Voltage Test: Under normal load conditions the DC output voltage should be checked for the proper voltage level (*Power Supply Voltage Output Specifications Chart, pg. 3*).

Battery Test: Under normal load conditions check that the battery is fully charged, check specified voltage both at the battery terminal and at the board terminals marked [+ BAT –] to ensure that there is no break in the battery connection wires. **Note:** Maximum charging current under discharges is 0.7A.

Note: Expected battery life is 5 years; however, it is recommended changing batteries in 4 years or less if needed.

LED Diagnostics:

Power Supply Board

	/	
Red (DC)	Green (AC)	Power Supply Status
ON	ON	Normal operating condition.
ON	OFF	Loss of AC. Stand-by battery supplying power.
OFF	ON	No DC output.
OFF	OFF	Loss of AC, Discharged or no stand-by battery. No DC output.

Red (Bat)	Battery Status				
ON	Normal operating condition.				
OFF	Battery fail/low battery.				

Power Distribution Module

Green (AC)	Power Distribution Module Status
ON	Normal operating condition.
OFF	No Power Output.

- 4 - AL400ULX series

Terminal Identification:

Power Supply Board

Terminal Legend	Function/Description
L, G, N	Connect 115VAC 60 Hz. to these terminals: L to Hot, N to Neutral. Do not use the [G] terminal.
+ DC -	12VDC @ 4A or 24VDC @ 3A continuous power-limited output.
AC Fail NC, C, NO	Indicates loss of AC power, e.g. connect to audible device or alarm panel. Relay normally energized when AC power is present. Contact rating 1A @ 28VDC. AC or brownout fail is reported within 1 minute of event. To delay reporting of up to 6 hrs., cut "AC delay" jumper and reset power to unit.
Bat Fail NC, C, NO	Indicates low battery condition, e.g. connect to alarm panel. Relay normally energized when DC power is present. Contact rating 1A @ 28VDC.
+ BAT -	Stand-by battery connections. Maximum charge current 0.7A.

Power Distribution Module

Terminal Legend PD4UL/PD4ULCB	Terminal Legend PD8UL/PD8ULCB	Function/Description	
1P to 4P	1P to 8P	Positive DC power outputs.	
1N to 4N	1N to 8N	Negative DC power outputs.	

Power Distribution Module(s):

Fig. 2a Replace fuses with the same type and rating 3.5A, 250V.

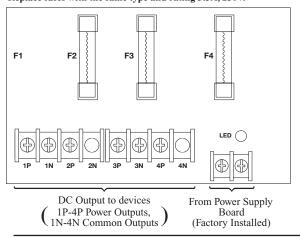


Fig. 2b

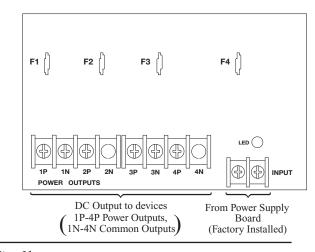



Fig. 3a




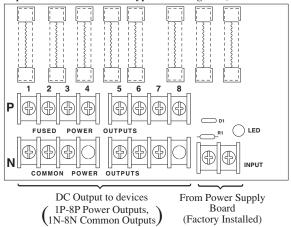


Fig. 3b

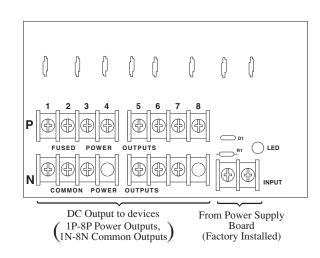

Appendix A - UL Listed Compatible Devices

A.1 Four (4) Wire Smoke Detectors

Table A-1 below lists four (4) wire smoke detectors compatible with AL400ULX output.

System Sensor Smoke Detector/Base	Detector Type	Max Stand-by Current (mA)	Alarm Current (mA)
B112LP	Base	0.12	36
B114LP	Base	*	*
B404B	Base	*	*
DH100ACDC	Photoelectric	0.15	0.70
DH100ACDCLP	Photoelectric	0.15	0.70
DH100ACDCLPW	Photoelectric	0.15	0.70
DH400ACDCI	Ionization Duct	25	95
DH400ACDCP	Photoelectric Duct	25	95
1112/24/D	Ionization	0.05	50
1424	Ionization	0.10	41
1451 (w/B402B Base)	Ionization	0.10	39
2112/24ATR	Photoelectric	0.50	60/70
2112/24AITR	Photoelectric	0.50	60/70
2112/24/D	Photoelectric	0.05	50
2112/24T/D	Photoelectric w/135° Thermal	0.05	50
2112/24TSRB	Photoelectric w/135° Thermal Supervisory Relay	15	45
2312/24TB	Photoelectric	0.12	50
2412 (12 volt)	Photoelectric	0.12	77
2424	Photoelectric	0.10	41
2451	Photoelectric	0.10	39
2451TH (with/B402B Base)	Photoelectric	0.10	39
2W-MOD	Loop Test/Maintenance Mod.	30	50
4W-B (12/24 volt)	Photoelectric I ³	0.05	23
4WT-B (12/24 volt)	Photoelectric I ³ w/Therm	0.05	23
4WTA-B (12/24 volt)	I ³ Photo w/Therm/Sounder	0.05	35
4WTR-B (12/24 volt)	I ³ Photo w/Therm/Relay	0.05	35
4WITAR-B (12/24 volt)	I3 Photo w/Isolated Therm/Sounder/Relay	0.05	50
2W-MOD2	I ³ Loop Test/Maintenance Mod.	0.05	*
RRS-MOD	I ³ Reversing Relay/Sync Module	0.05	*
6424	Projected Beam	10	28.4
Beam 1224(S)	Projected Beam	17	38.5

^{*} Contact manufacturer for current draws.

A.2 Relays

Table A-2 below lists relays compatible with AL400ULX output.


Manufacturer	Model	Current (mA)	
	PR-1	15	
	PR-2	30	
System Conson	PR-3	30	
System Sensor	EOLR-1	30	
	R-10T	23	
	R-14T	23	

Manufacturer	Model	Current (mA)
	R-20T	40
	R-24T	40
System Conson	R-10E	23
System Sensor	R-14E	23
	R-20E	40
	R-24E	40

Enclosure Dimensions (BC300):

AL400ULX, AL400ULXR, AL400ULPD4, AL400ULPD4CB, AL400ULPD8, AL400ULPD8CB

13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.55mm)

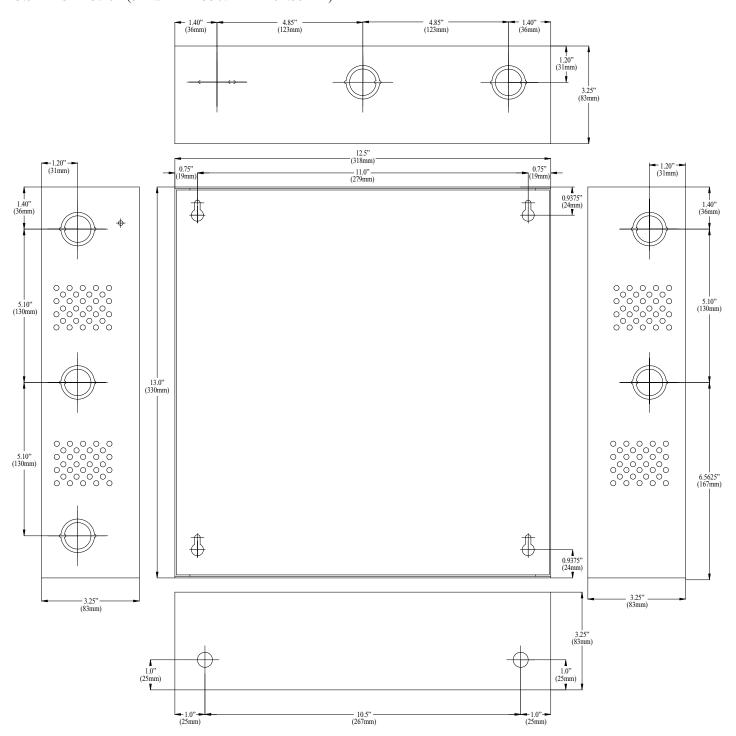

Enclosure Dimensions (BC400): AL400ULXX, AL400ULXXR, AL400ULXPD4, AL400ULXPD4CB, AL400ULXPD8, AL400ULXPD8CB AL400ULXPD16, AL400ULXPD16CB

15.5" x 12" x 4.5" (393.7mm x 304.8mm x 114.3mm)

